


8.9 CONNECTING A REMOTE RECEIVER

Insert the telephone – type male connector of the Remote control receiver into the female Receptacle on the Carrier Box as shown below, and mount the receiver in a suitable position. Straighten the aerial wire, taping it out of the way of any moving parts.

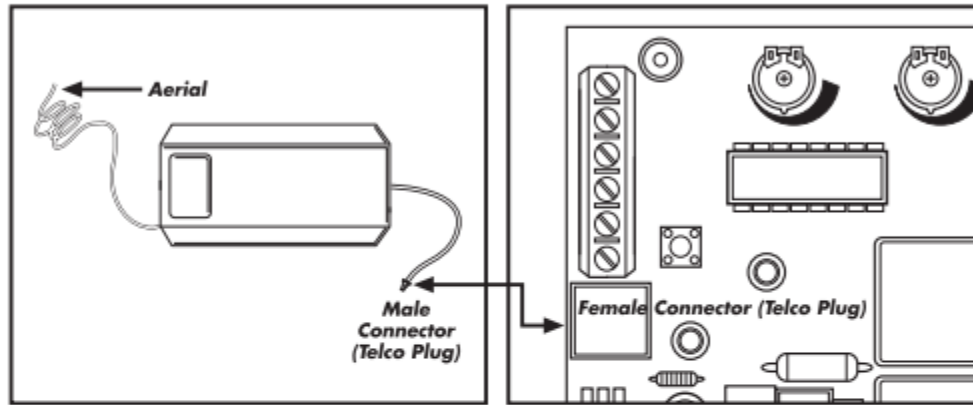

HOW TO PROGRAM CODE HOPPING RECEIVERS

1. Select "pulse" on receiver before connecting to female connector on the PCB.
2. Plug receiver into the female connector on the PCB.
3. Press and release program button.
4. Holding remote at least an arm length away, press and release the desired button on the remote.
5. Repeat steps 3 & 4 for every remote.
6. A maximum of 32 remotes can be programmed per receiver.
7. Once all remotes have been learned, unplug the receiver and plug in again.

***To erase all codes, press and hold down program button until LED flashes.
Unplug receiver and plug in again.***