



Code: MERX1-C1 (Regen) - 30m to 50m range

Code: MERX1-C1/S (Super Het.) - 80m to 100m range

Installation Instructions: New Installation

Select **Latch/Pulse** on links, before connecting power.

Connect wires as required, LED will flash twice on power up.

Press & hold the **Program** button, after 8 seconds the LED will flash & then you can release. This will erase all codes in the system.

Now press & release the **Program** button once, LED will flash once.

Hold the transmitter 1 metre away from the receiver & press the required button on the transmitter. The receiver LED will then flash 3 times to indicate that the transmitter has been accepted & is stored.

Press & release the **Program** button again, the LED will flash once again, then learn in your next transmitter.

Continue pressing the **Program** button once followed by the next transmitter until all your transmitters have been learned in. Maximum 32.

Once all your transmitters are in disconnect power for 10 seconds & reconnect.

Installation Instructions: Existing Installation

Press & release the **Program** button until you have reached the required slot.

(Example: If you already have 5 transmitters programmed into the receiver & you want to add # 6, you need to press & release the **Program** button 6 times to get to slot 6.)

Hold the transmitter 1 metre away from the receiver & press the required button on the transmitter. The receiver LED will then flash 3 times to indicate that the transmitter has been accepted & is stored.

Press & release the **Program** button again, the LED will flash once again, then learn in your next transmitter.

Continue pressing the **Program** button once followed by the next transmitter until all your transmitters have been learned in. Maximum 32.

Once all your transmitters are in disconnect power for 10 seconds & reconnect.

Deleting Transmitters:

Erase Entire Memory

Press & hold the **Program** button, after 8 seconds the LED will flash & then you can release.

Erase Individual Transmitters

Press & release the **Program** button until you have reached the required slot.

(Example: Press & release Program button 5 times for slot 5 or 7 times for slot 7.)

Press any button on a spare transmitter or on a new transmitter, this will overwrite any code in the slot.

Disconnect power for 10 seconds & reconnect.

It is advisable to mark the transmitters according to their corresponding slot numbers.



Manufactured By: MARTIN ELECTRONICS

PO BOX 82129 SOUTHDALE 2135 TEL: 011-433-4084 FAX: 011-680-3080