



MOTORISED OPENER FOR VERTICAL TYPE GARAGE DOORS

Section 8: Installation Instructions (Continued)

8.8 INSTALLING AND PROGRAMMING THE REMOTES AND WALL CONSOLE

(Refer to illustration on page 14)

1. Press and release the "Function" button on the PC board inside the Garage Door Operator.
2. LED will flash once.
3. Push and hold remote control/wall console button until LED flashes again.
4. Repeat steps 1-3 for every remote control/wall console.
5. To re-format system, hold function button in for at least 5 seconds.

INSTALLING THE PUSH BUTTON CONSOLE

(Only applicable if remote control and wall console are not used)

1. Identify a practical and easily accessible location for the push- button.
2. Connect two wires to the connections marked (1) TRIGGER and (2) COMMON. Note and record colour and connecting positions of each of the wires.
3. Mount the push – button against the wall, route a practical path with no interference with any moving assemblies to the Carrier Box connector block. Make sure to secure the cables at short intervals with suitable means.
4. Connect the wires that the wire to the corresponding connector block terminals as indicated in Figure 11. Ensure that the wire positions correspond with those on the push – button.



MOTORISED OPENER FOR ROLL-UP GARAGE DOORS

Section 8: Installation Instructions

8.4 INSTALLING AND PROGRAMMING THE REMOTE WALL CONSOLE & REMOTE CONTROLS

The receiver, transmitters and remote wall console are pre-programmed at the factory. A total of 15 transmitters/wall consoles can be programmed onto the onboard receiver. To program additional transmitters and or wall consoles, follow these steps:

- * Press and release the "Function" button on the PC board inside the Garage Door Operator.
- * LED will flash once.
- * Push and hold remote control/wall console button until LED flashes again.
- * Repeat the first three steps for every remote control/wall console.
- * To re-format system, hold function button down until LED (LD1) lights up, then release the button. When the LED turns off after approximately 4 seconds, all learned transmitters and remote wall consoles will be erased.

8.5 LOCK-OUT FUNCTION

When the lock button is depressed, the courtesy light will flash once to indicate that the lock-out function has been activated. It is not possible to operate the unit by remote control until the lock-out function has been de-activated on the remote wall console. To de-activate the lock-out function, press the 'lock' button on the remote wall console. The courtesy light will flash twice to indicate that the lock-out function has been de-activated. The garage door operator will now function normally from the remotes and remote wall console.

When the lock is active and the opener is triggered, the courtesy light will flash 3 times in rapid succession to indicate that the opener is locked.