




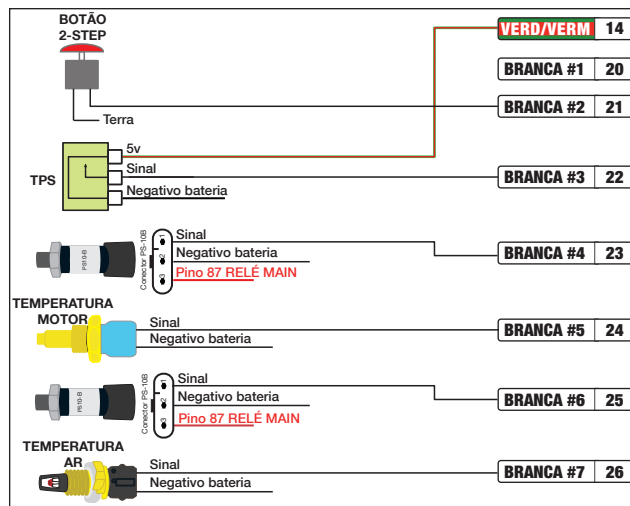

CONECTOR 26 PINOS

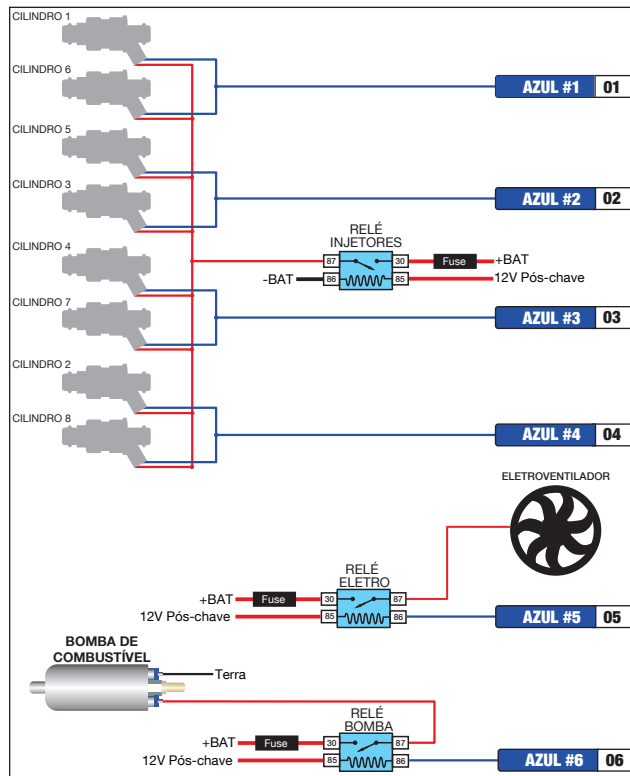

Ordem de ignição (1-5-4-2-6-3-7-8)
Ordem de ignição (1-3-7-2-6-5-4-8)
Ordem de ignição (1-5-4-8-6-3-7-2)

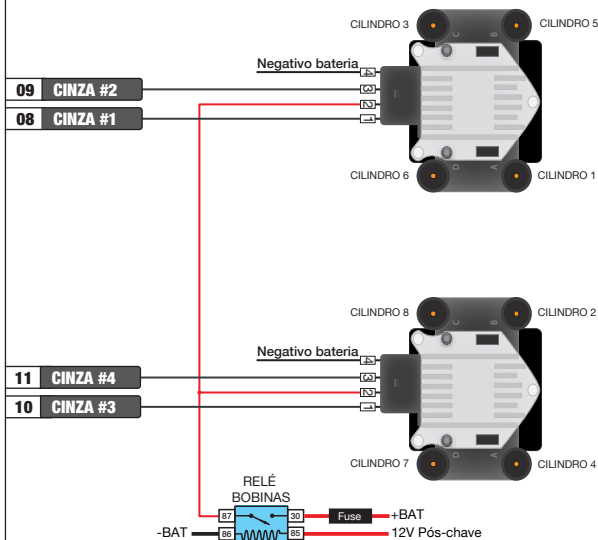