


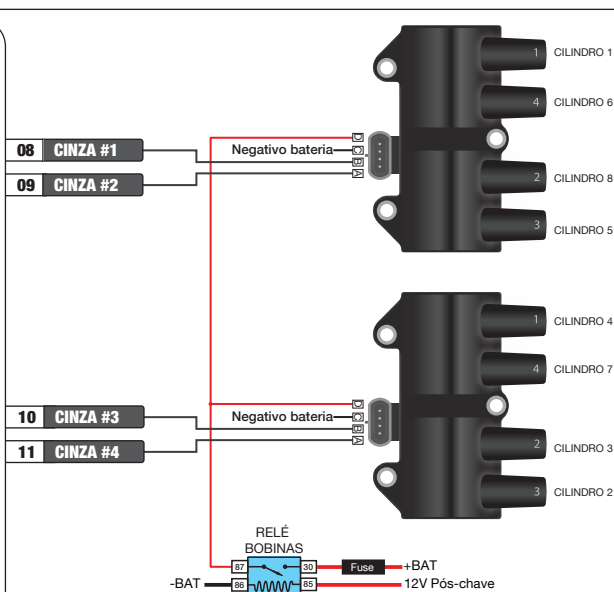

Ordem de ignição (1-8-4-3-6-5-7-2)
Ordem de ignição (1-8-7-3-6-5-4-2)
Ordem de ignição (1-8-7-2-6-5-4-3)

