






# Self-inflating mattress Owner's manual

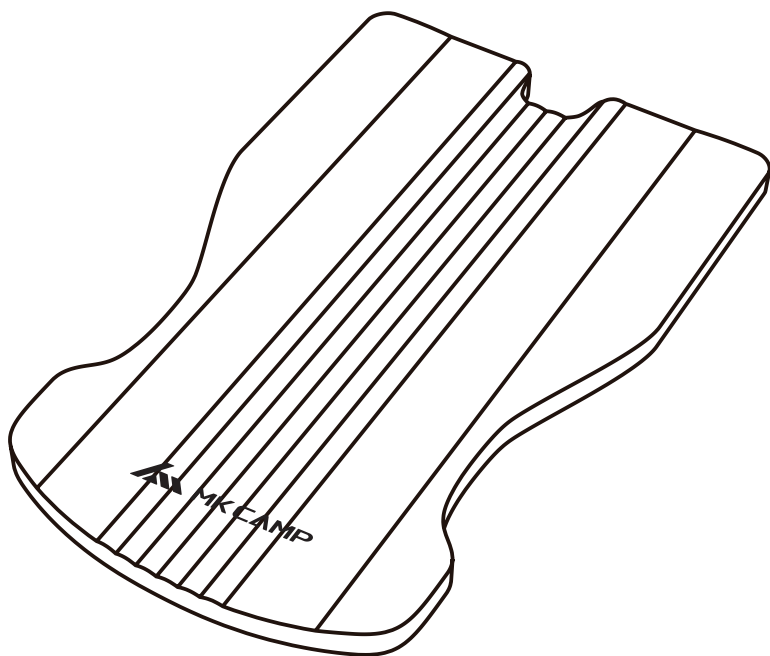


## Product parameters

- Category      Mattress for automobile
- Material      Fabric: Polyester fiber    Linning:sponge  
Storage bag: polyester fiber Support  
rope:polyester fiber    Binding tape: polyester fib
- Size      Unfold size 210\*130\*8.5cm.  
Package size 70\*30\*30cm
- Accessories      1 \* self-inflating mattress, 1 \* storage bag, 2 \*  
supporting ropes, 1 \* binding tape and 1 \* repair  
kit
- Weight      4.7kg

## Method of measuring the mattress


There is a  $\pm 3$ cm error when measuring manually.

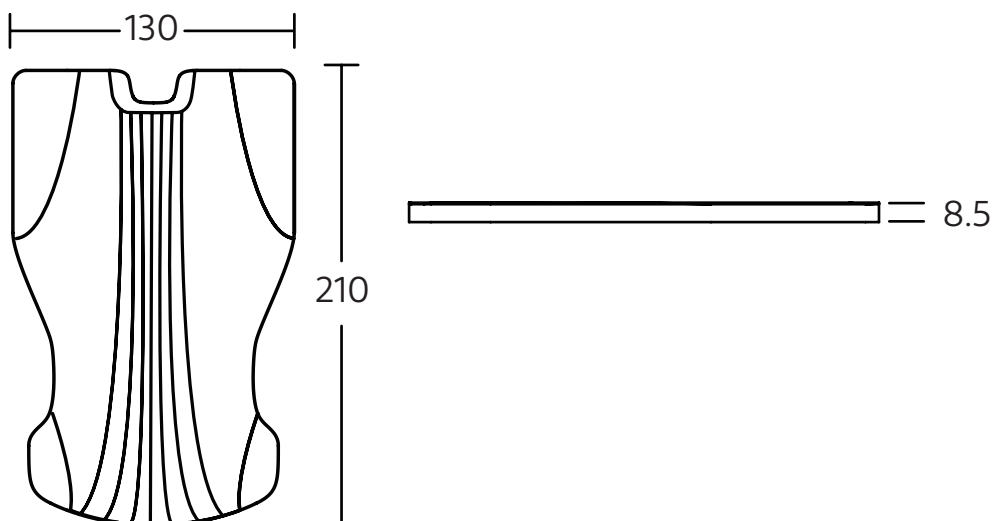


# Instruction of use

1. Inflating method: spread out the mattress, open the air valve, and then the mattress automatically inflates and expands. Please shut down the valve when the mattress is finishing inflation. You can adjust the mattress hardness according to your needs and then shut down the valve.


Note: We DO NOT recommend the mattress under rolling-up conditions for a long time. Please add some air if you need to store it for over two months.

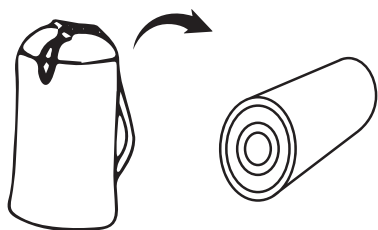


1. Take out the mattress from the bag, and untie the rope.

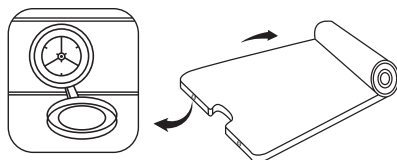

2. Put the back seat down, and unfold the mattress in the trunk. Then open the air valve, and turn it over to the self-inflating side.

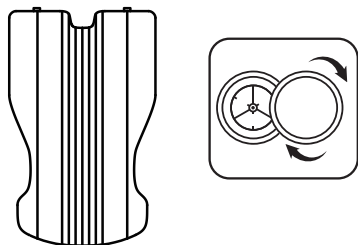

3. Ensure the mattress is filled with air, then shut down the air valve. Adjust the mattress to fit in the trunk.

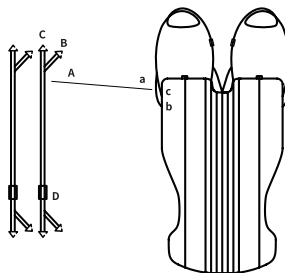


4. ① Buckle up the fixed rope from A to a, B to b, C to c, and vice versa on the inside.  
② Please ensure that the fixed rope should loop into the front seat headrests.  
③ The other side of the fixed rope must buckle up to the notch of the mattress.  
④ Please adjust the buckle D to a comfortable height, and the mattress is ready to use.


## Method of packup and storage

2. Deflate method: please open the air valve, roll the mattress as the graph shows, and press out the air multiple times. Shut down the air valve, then package the mattress by folding or rolling.


Note: Pressing out the air multiple times can reduce the storage volume effectively. Please store the mattress in the packing bag to avoid scratches.

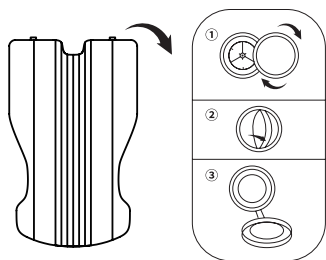


1. Untie and unbuckle all the fixed rope. Open the air valve, and flip the air hole to deflate status.

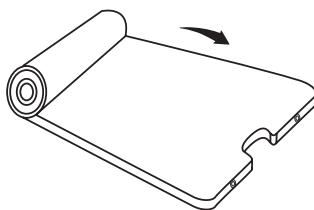

2. Please roll the mattress from the opposite side of the air valve, then slowly press and roll to deflate the air. (Repeat this step if air deflation is not complete)

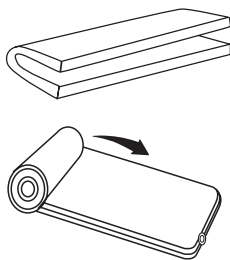

Please fold the mattress in the middle and roll it up into a drum shape after fully deflating.

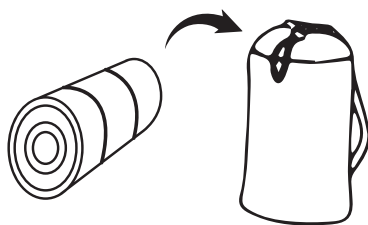

Please tie the mattress with the rope and properly store it in the storage bag.

## Product purpose

The product can be used as a self-inflating sleeping mattress for the vehicle, with comfort and portability. Perfectly suitable for daily use and outdoor camping.


## Attention!

Please make sure the ground surface is flat. And the surface must not have any gravel, thorns and other sharp objects that will pierce or scratch the fabric to cause leaking and affect regular use.

## Maintenance

- 1. Method of storage: please ensure the mattress is under inflating condition. It is stored in a cool and dry place to ensure the elasticity of the sponge is not damaged.
- 2. Method of cleaning: please shut down the air valve under the inflating condition. Wash it gently with a soft brush and neutral detergent, and store it after natural air drying.
- 3. Method of repairing:  
Please immerse the mattress into the water, and mark the location of where the bubbles come out.

Paste the repair decal to the hole. And let it stand still for 4 hours. DO NOT inflate the mattress during that 4 hours.

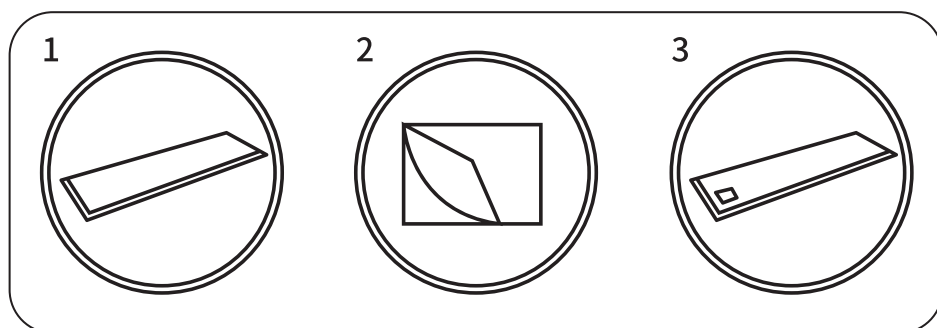

ATTENTION! The included repair kit can ONLY repair tiny damage, and tiny hole. This repairable size SHOULD NOT larger than a nib.