
 


## IMPORTANT:

Before installing the smart lock, follow the below steps on this page to complete the installation of the lock cylinder.

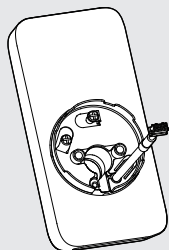

Exterior Assembly



Lock Cylinder



Screw

### What You'll Need


Phillips-Head  
Screwdriver



## Lock Cylinder Installation Instructions

### Install the Lock Cylinder

1. Insert the lock cylinder into the cylinder hole of the exterior assembly.

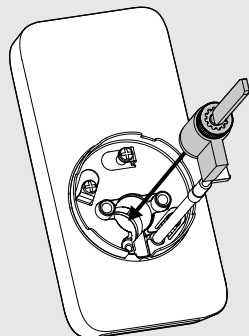

2. Tighten the cylinder screw clockwise with a screwdriver.

