


---

*ANDOVER MAILBOX INSTALLATION*

---



**TOOLS & SUPPLIES**

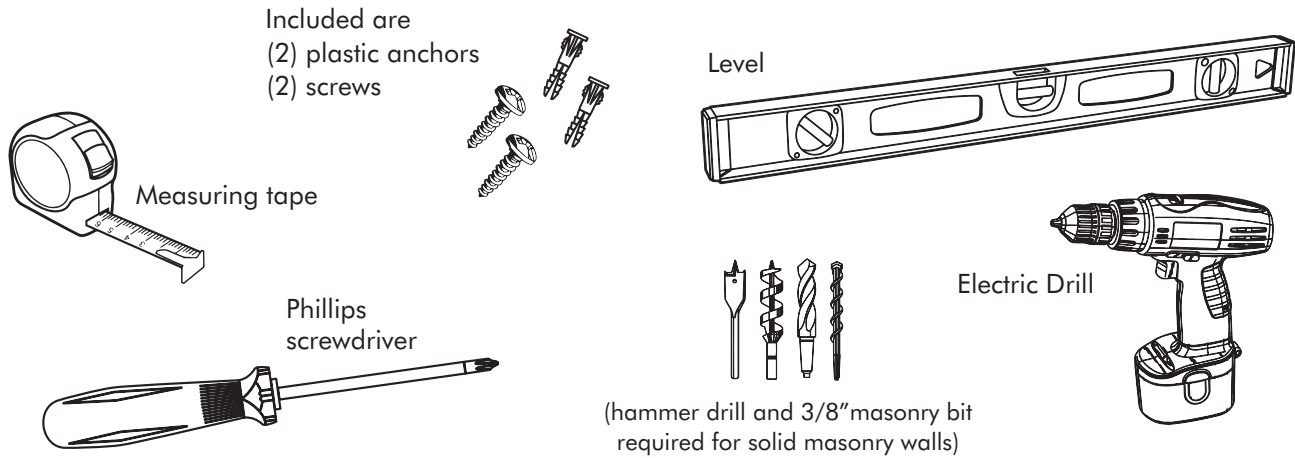


**INSTRUCTIONS**

1. Measure the distance between the hardware holes located at the back of your mailbox. From the center of each hardware hole should be 8" inches apart.
2. Measure and mark the same distance on your wall. Ensure that the markings are level, so that your mailbox will hang accordingly.
3. With the appropriate tool for your exterior covering, drill through your two marked holes.
4. If needed, install the plastic anchors. (For composite siding, drywall, and masonry walls. Not necessary on wood.)
5. Install screws. Be sure to leave a  $\frac{3}{4}$ " gap from the wall.
6. Hang your mailbox and tighten the screws to secure it.


1

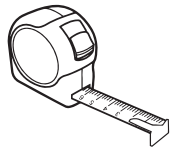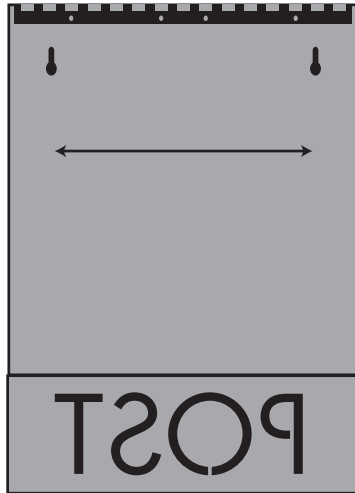

2

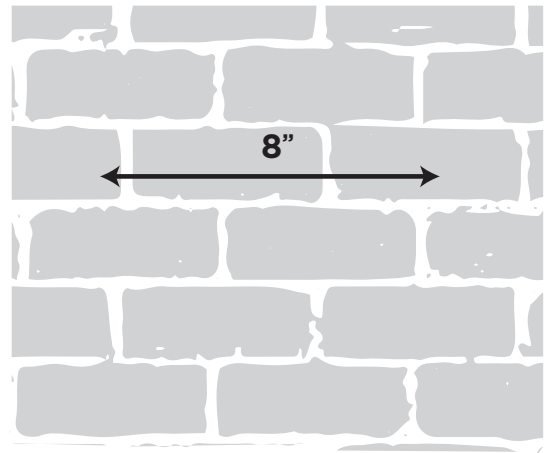


3

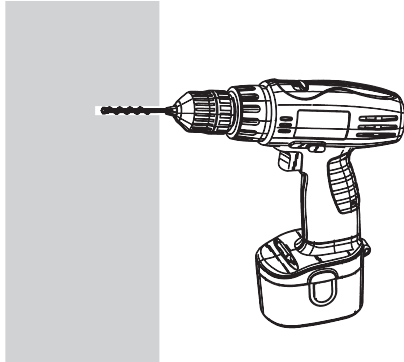


4



5

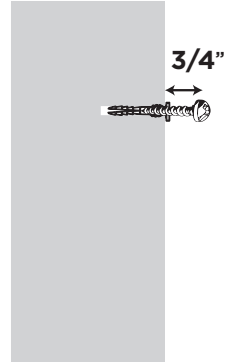

6

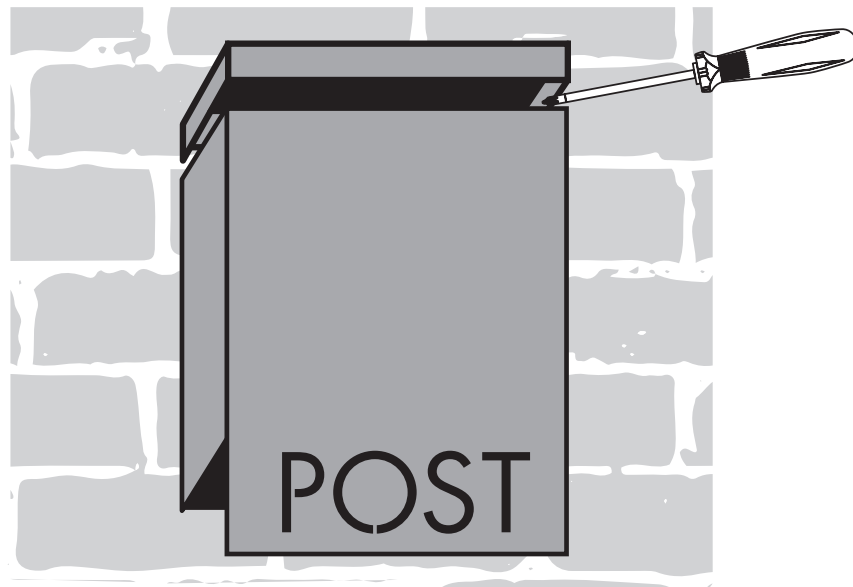

**Have questions? Please contact us at [sales@boldmfg.com](mailto:sales@boldmfg.com)**