



Assembly Instructions ULTIM8 DRIP table version

Step 1

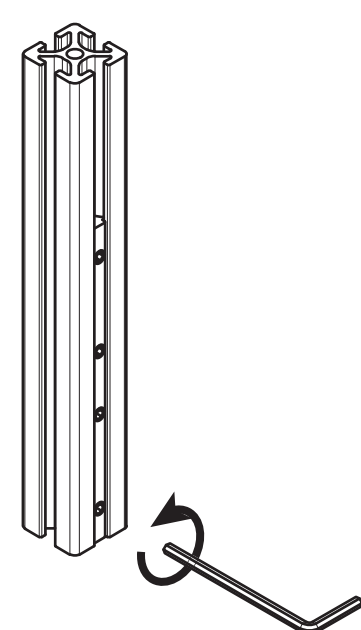


use included hex key to loosen all set screws on connectors in one of the 2020 extrusions

Step 2

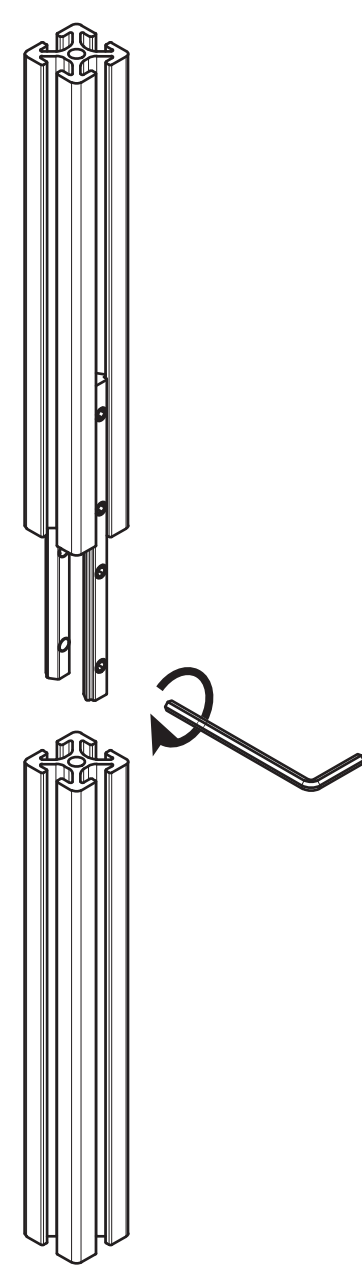


with set screws all very loose lower connectors and insert second 2020 extrusion then tighten set screws

Step 3

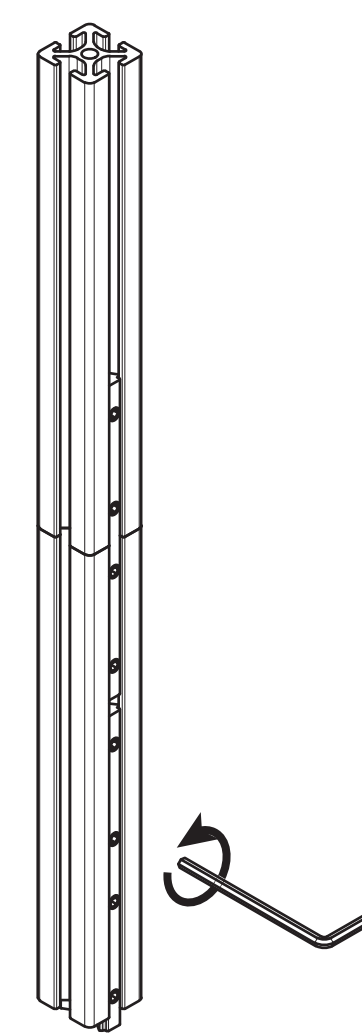


use included hex key to loosen all set screws on connectors on the other 2020 extrusion

Step 4

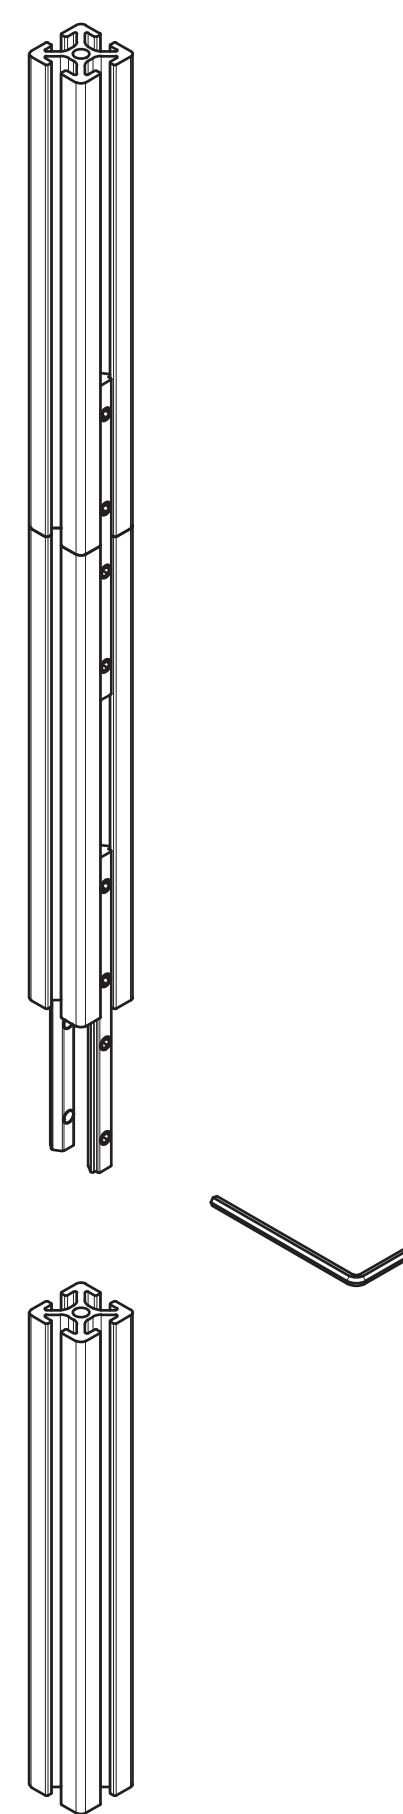


with set screws all very loose lower connectors and insert third 2020 extrusion then tighten set screws

Step 5

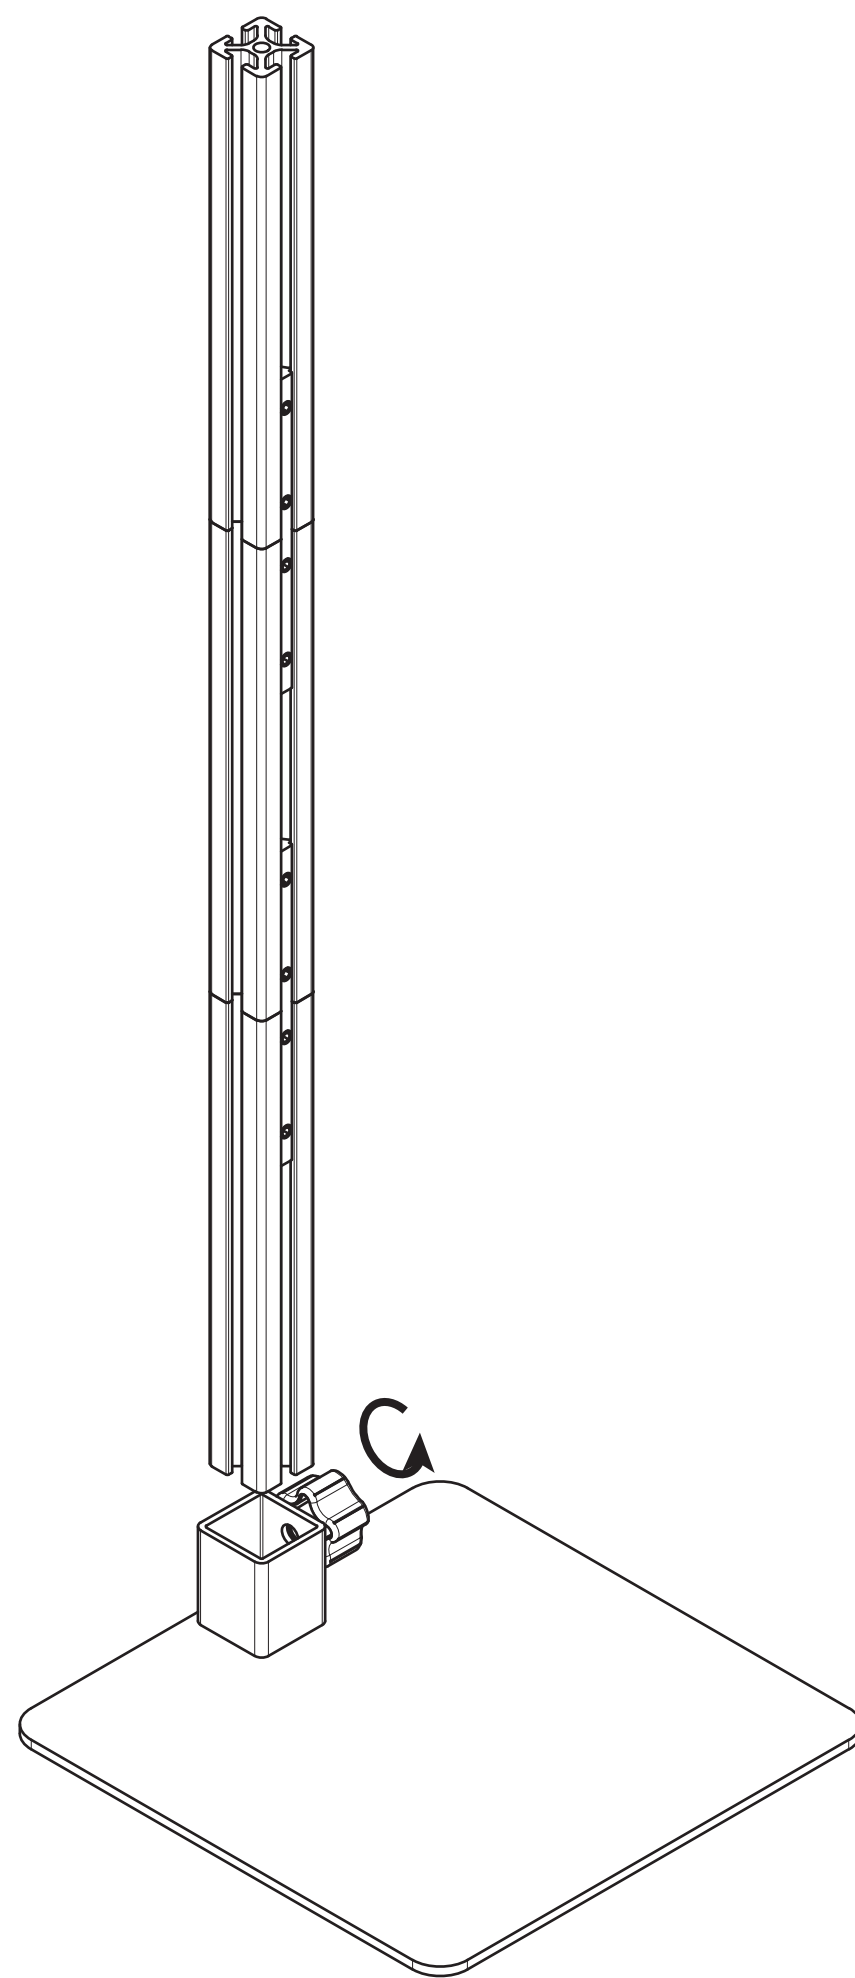


loosen knob on base and insert assembled 2020 column into base and tighten knob to secure

Step 6

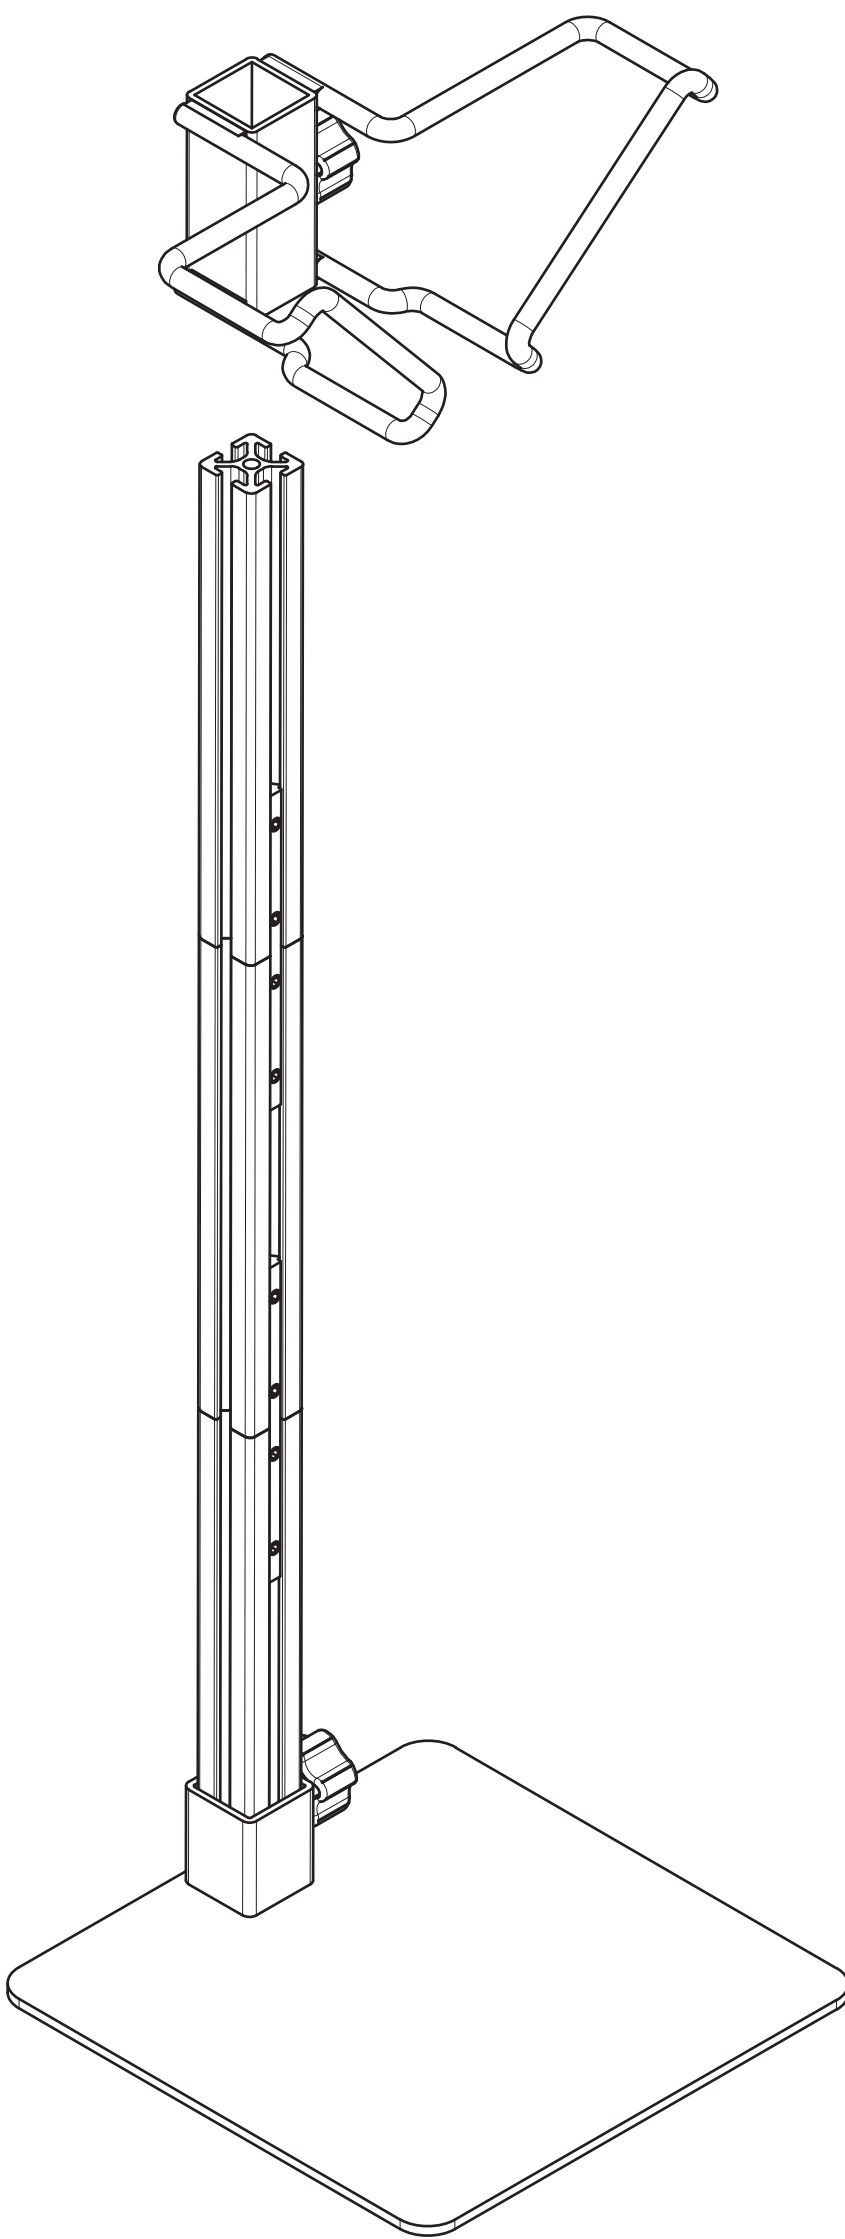

loosen knob on wire vat holder and insert this over the 2020 column and tighten knob at desired height

Step 7

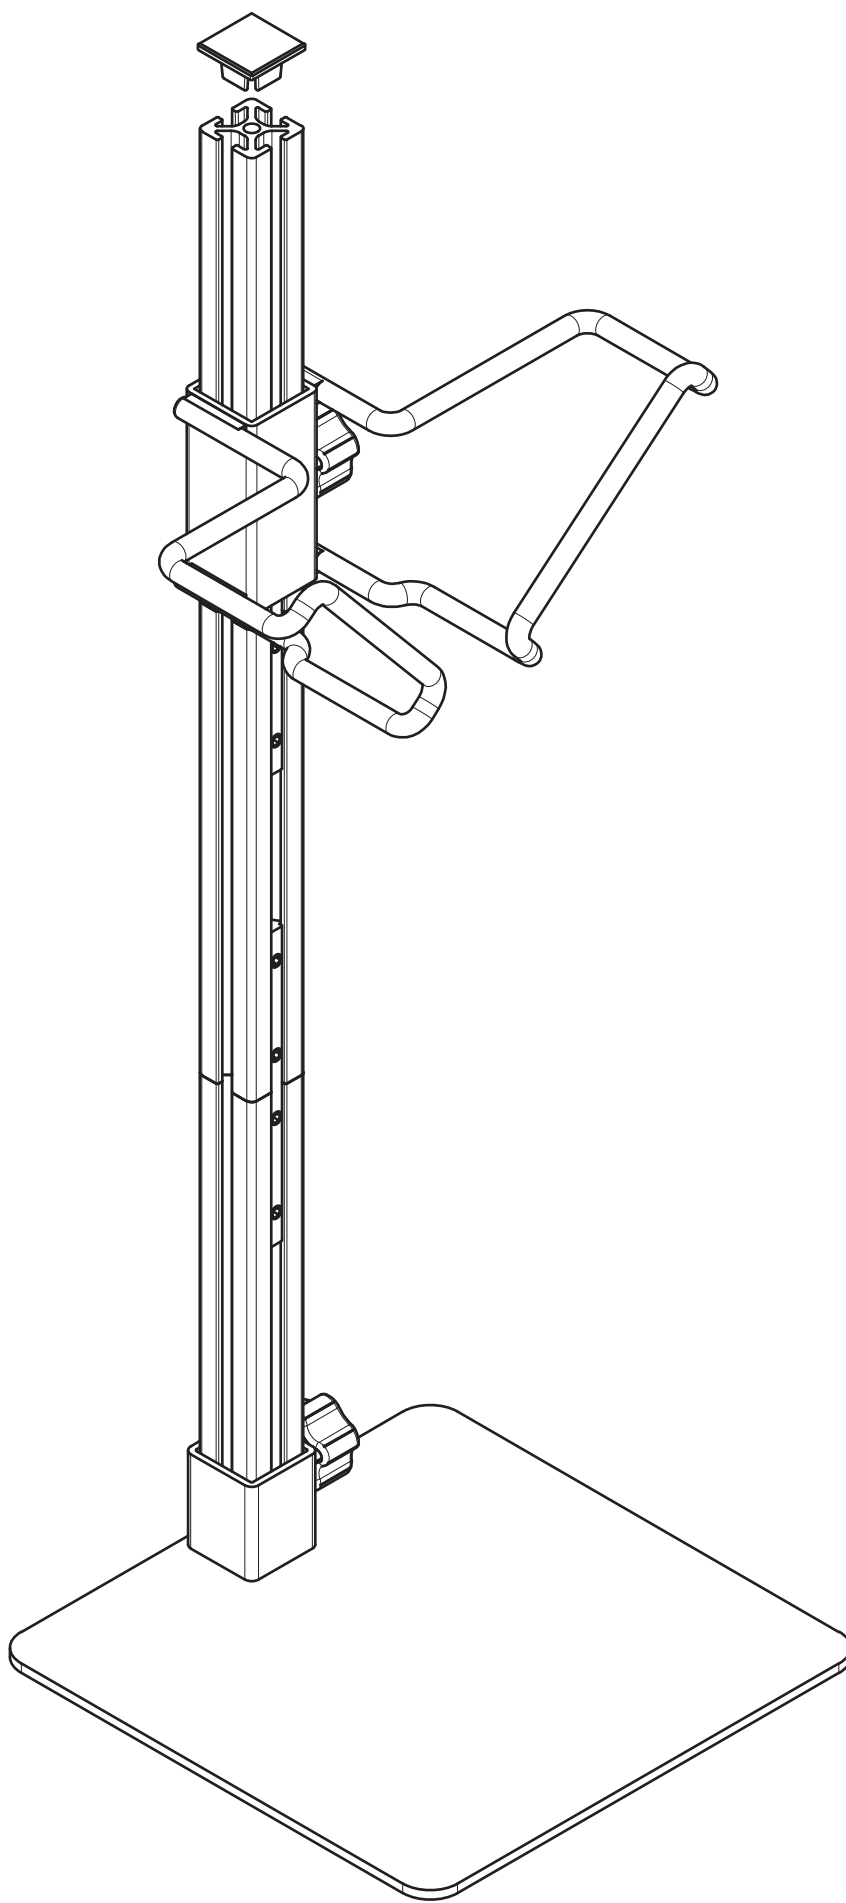

insert plastic end cap on top of 2020 column

Final Assembled
ULTIM8 DRIP table version