



Assembly Instructions ULTIM8 DRIP wall version

Step 1

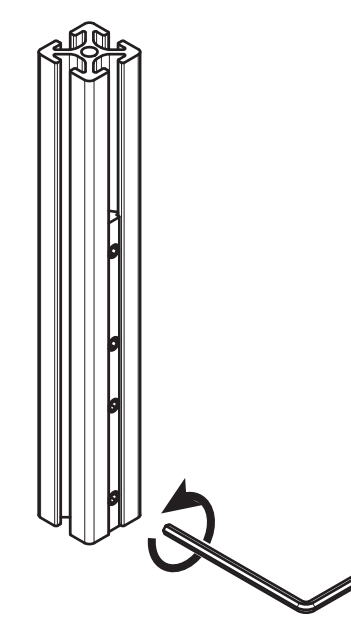


use included hex key to loosen all of the set screws on connectors on the 2020 extrusion

Step 2

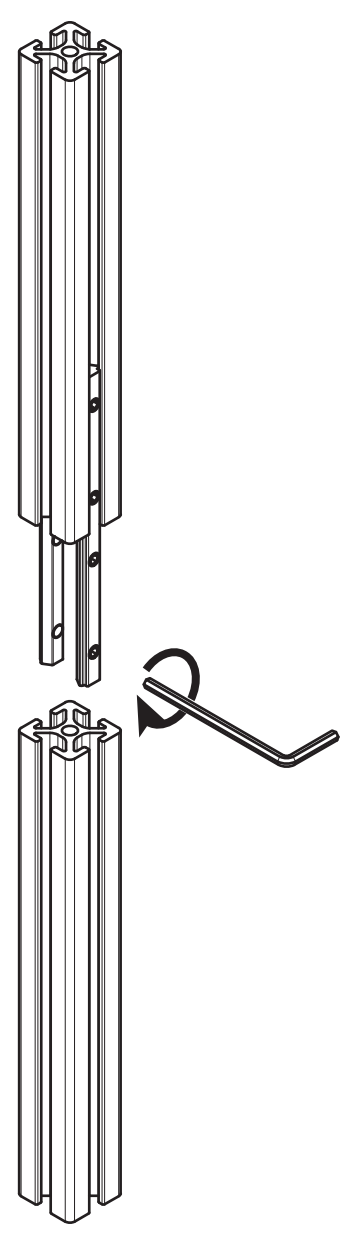


with all set screws all very loose, lower connectors and insert the second 2020 extrusion, then tighten the set screws

Step 3

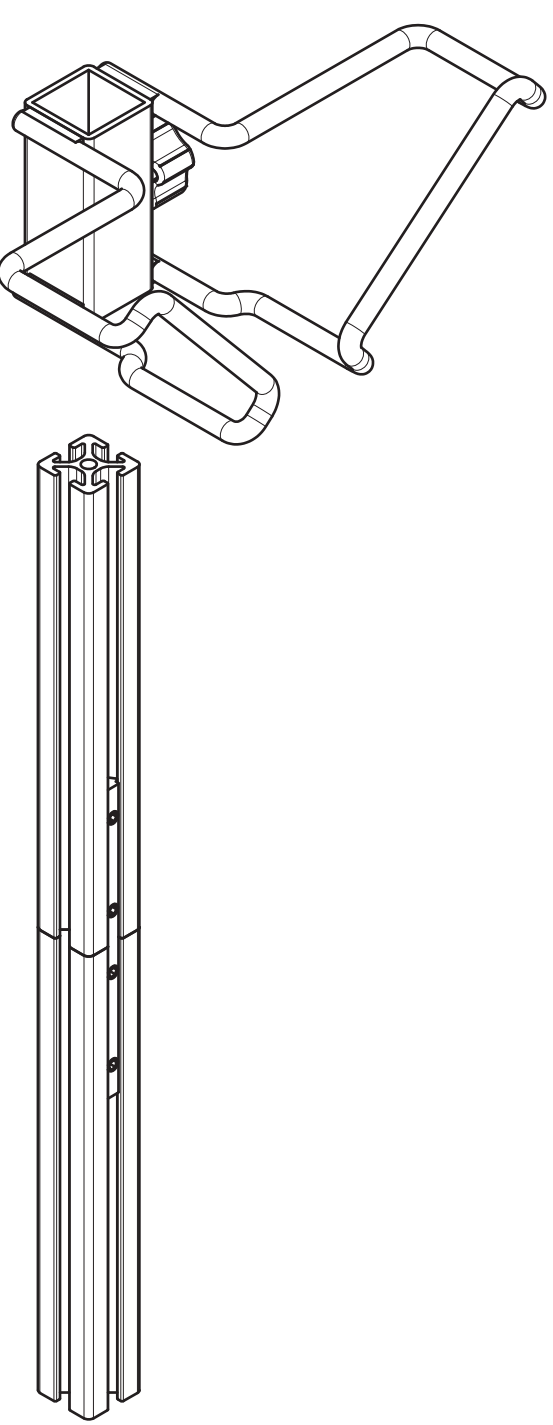


loosen the knob on wire vat holder and insert this over the 2020 column and tighten knob at desired height

Step 4

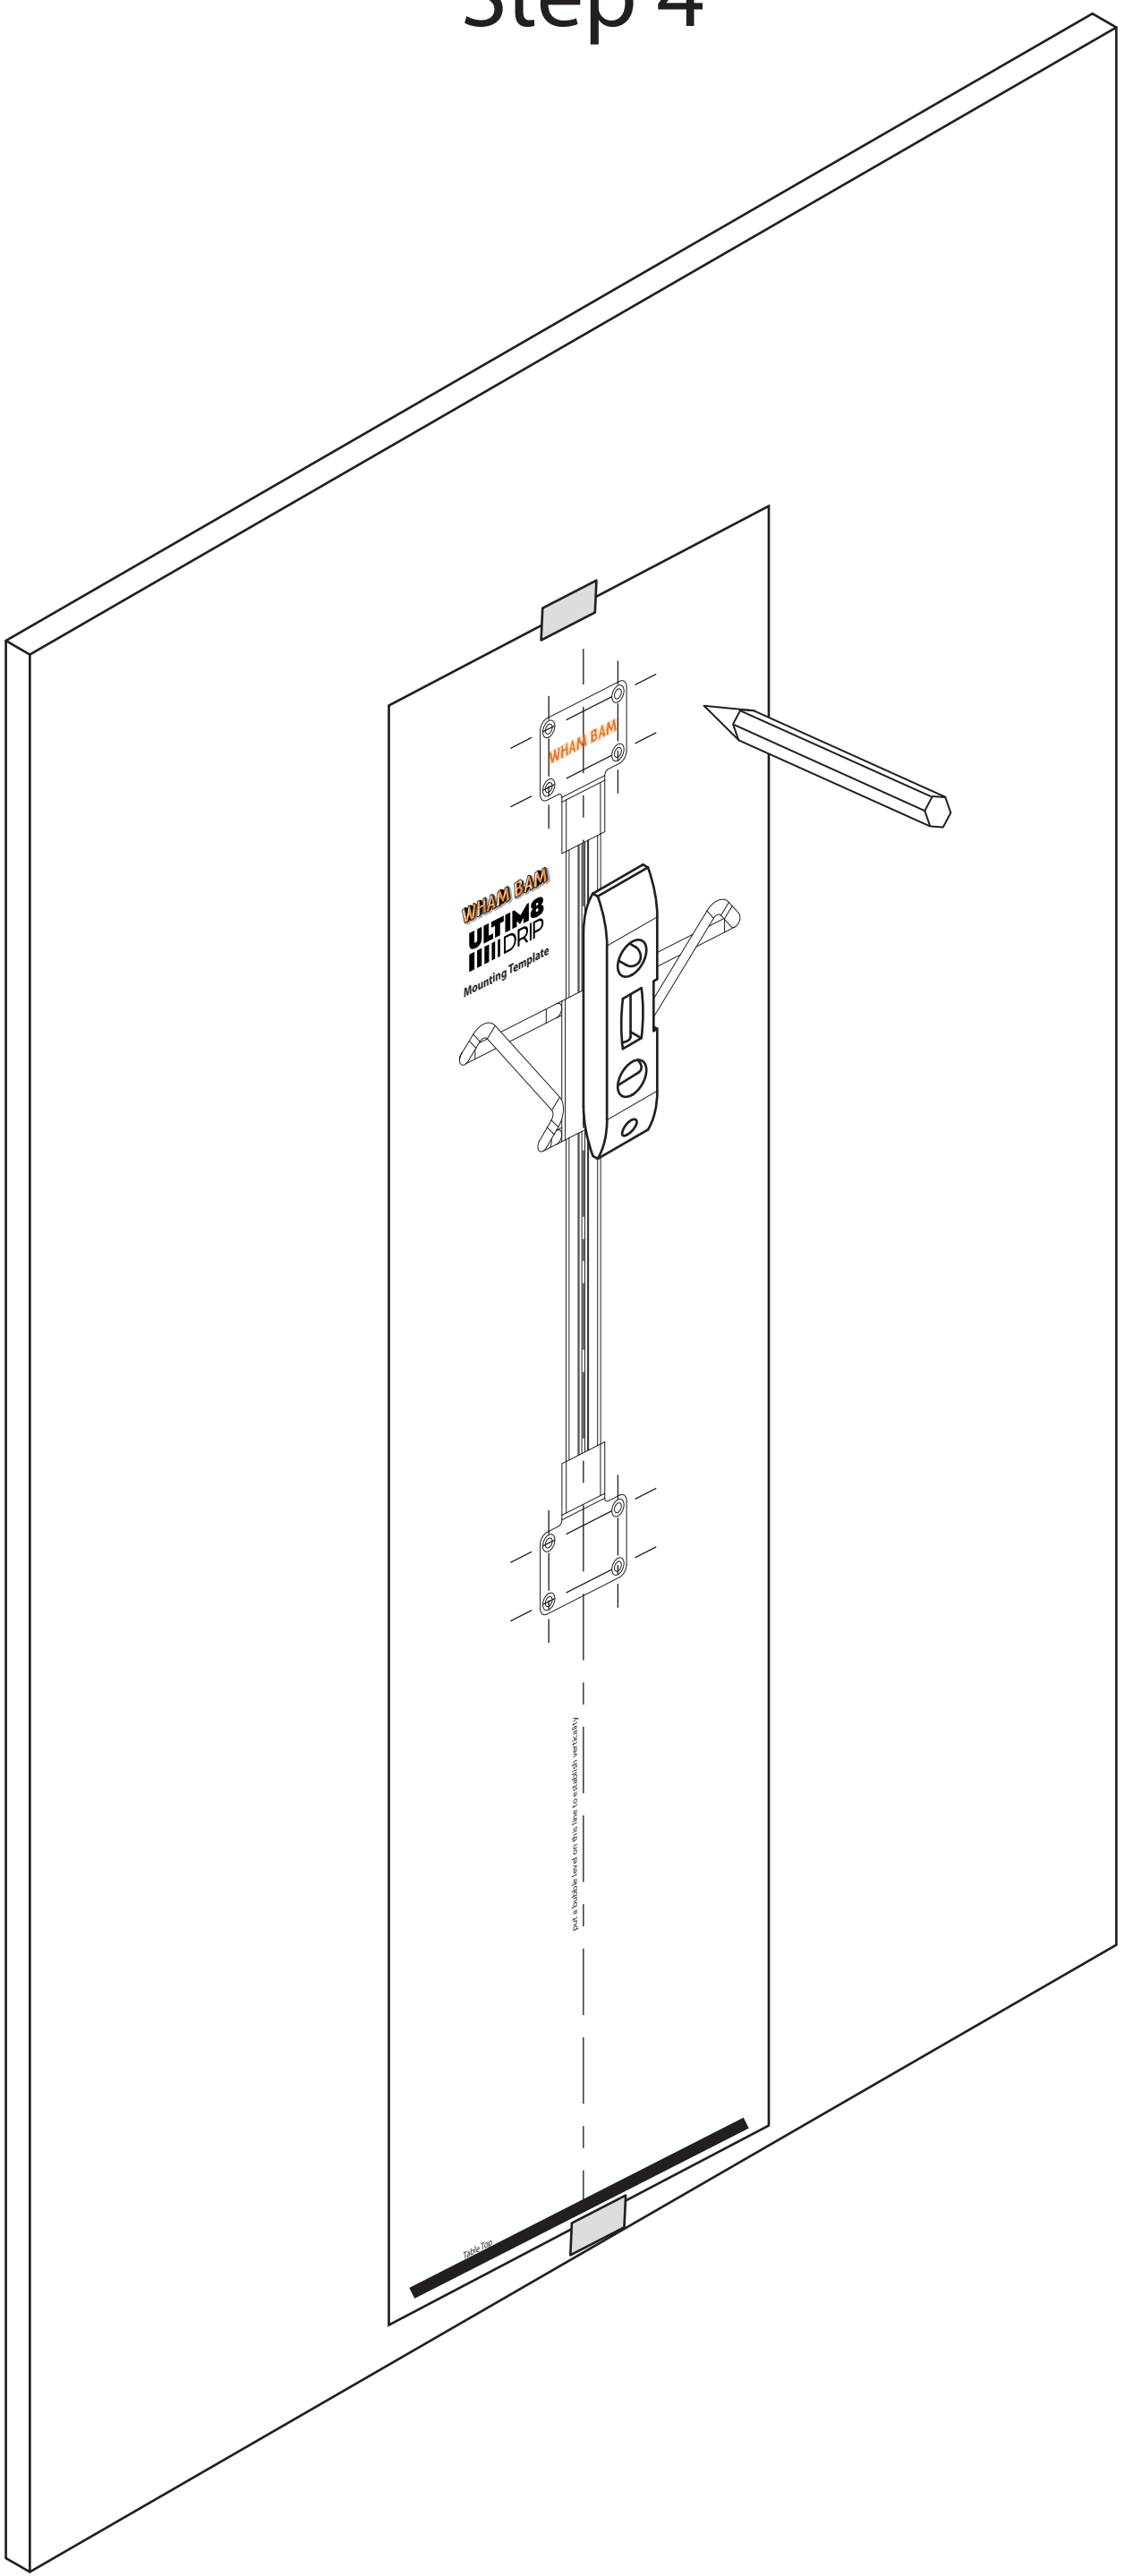


tape the top of the mounting template to the wall above your work bench, use the bubble level level the template, secure the bottom with tape. use a center punch or nail to mark centers of holes

Step 5

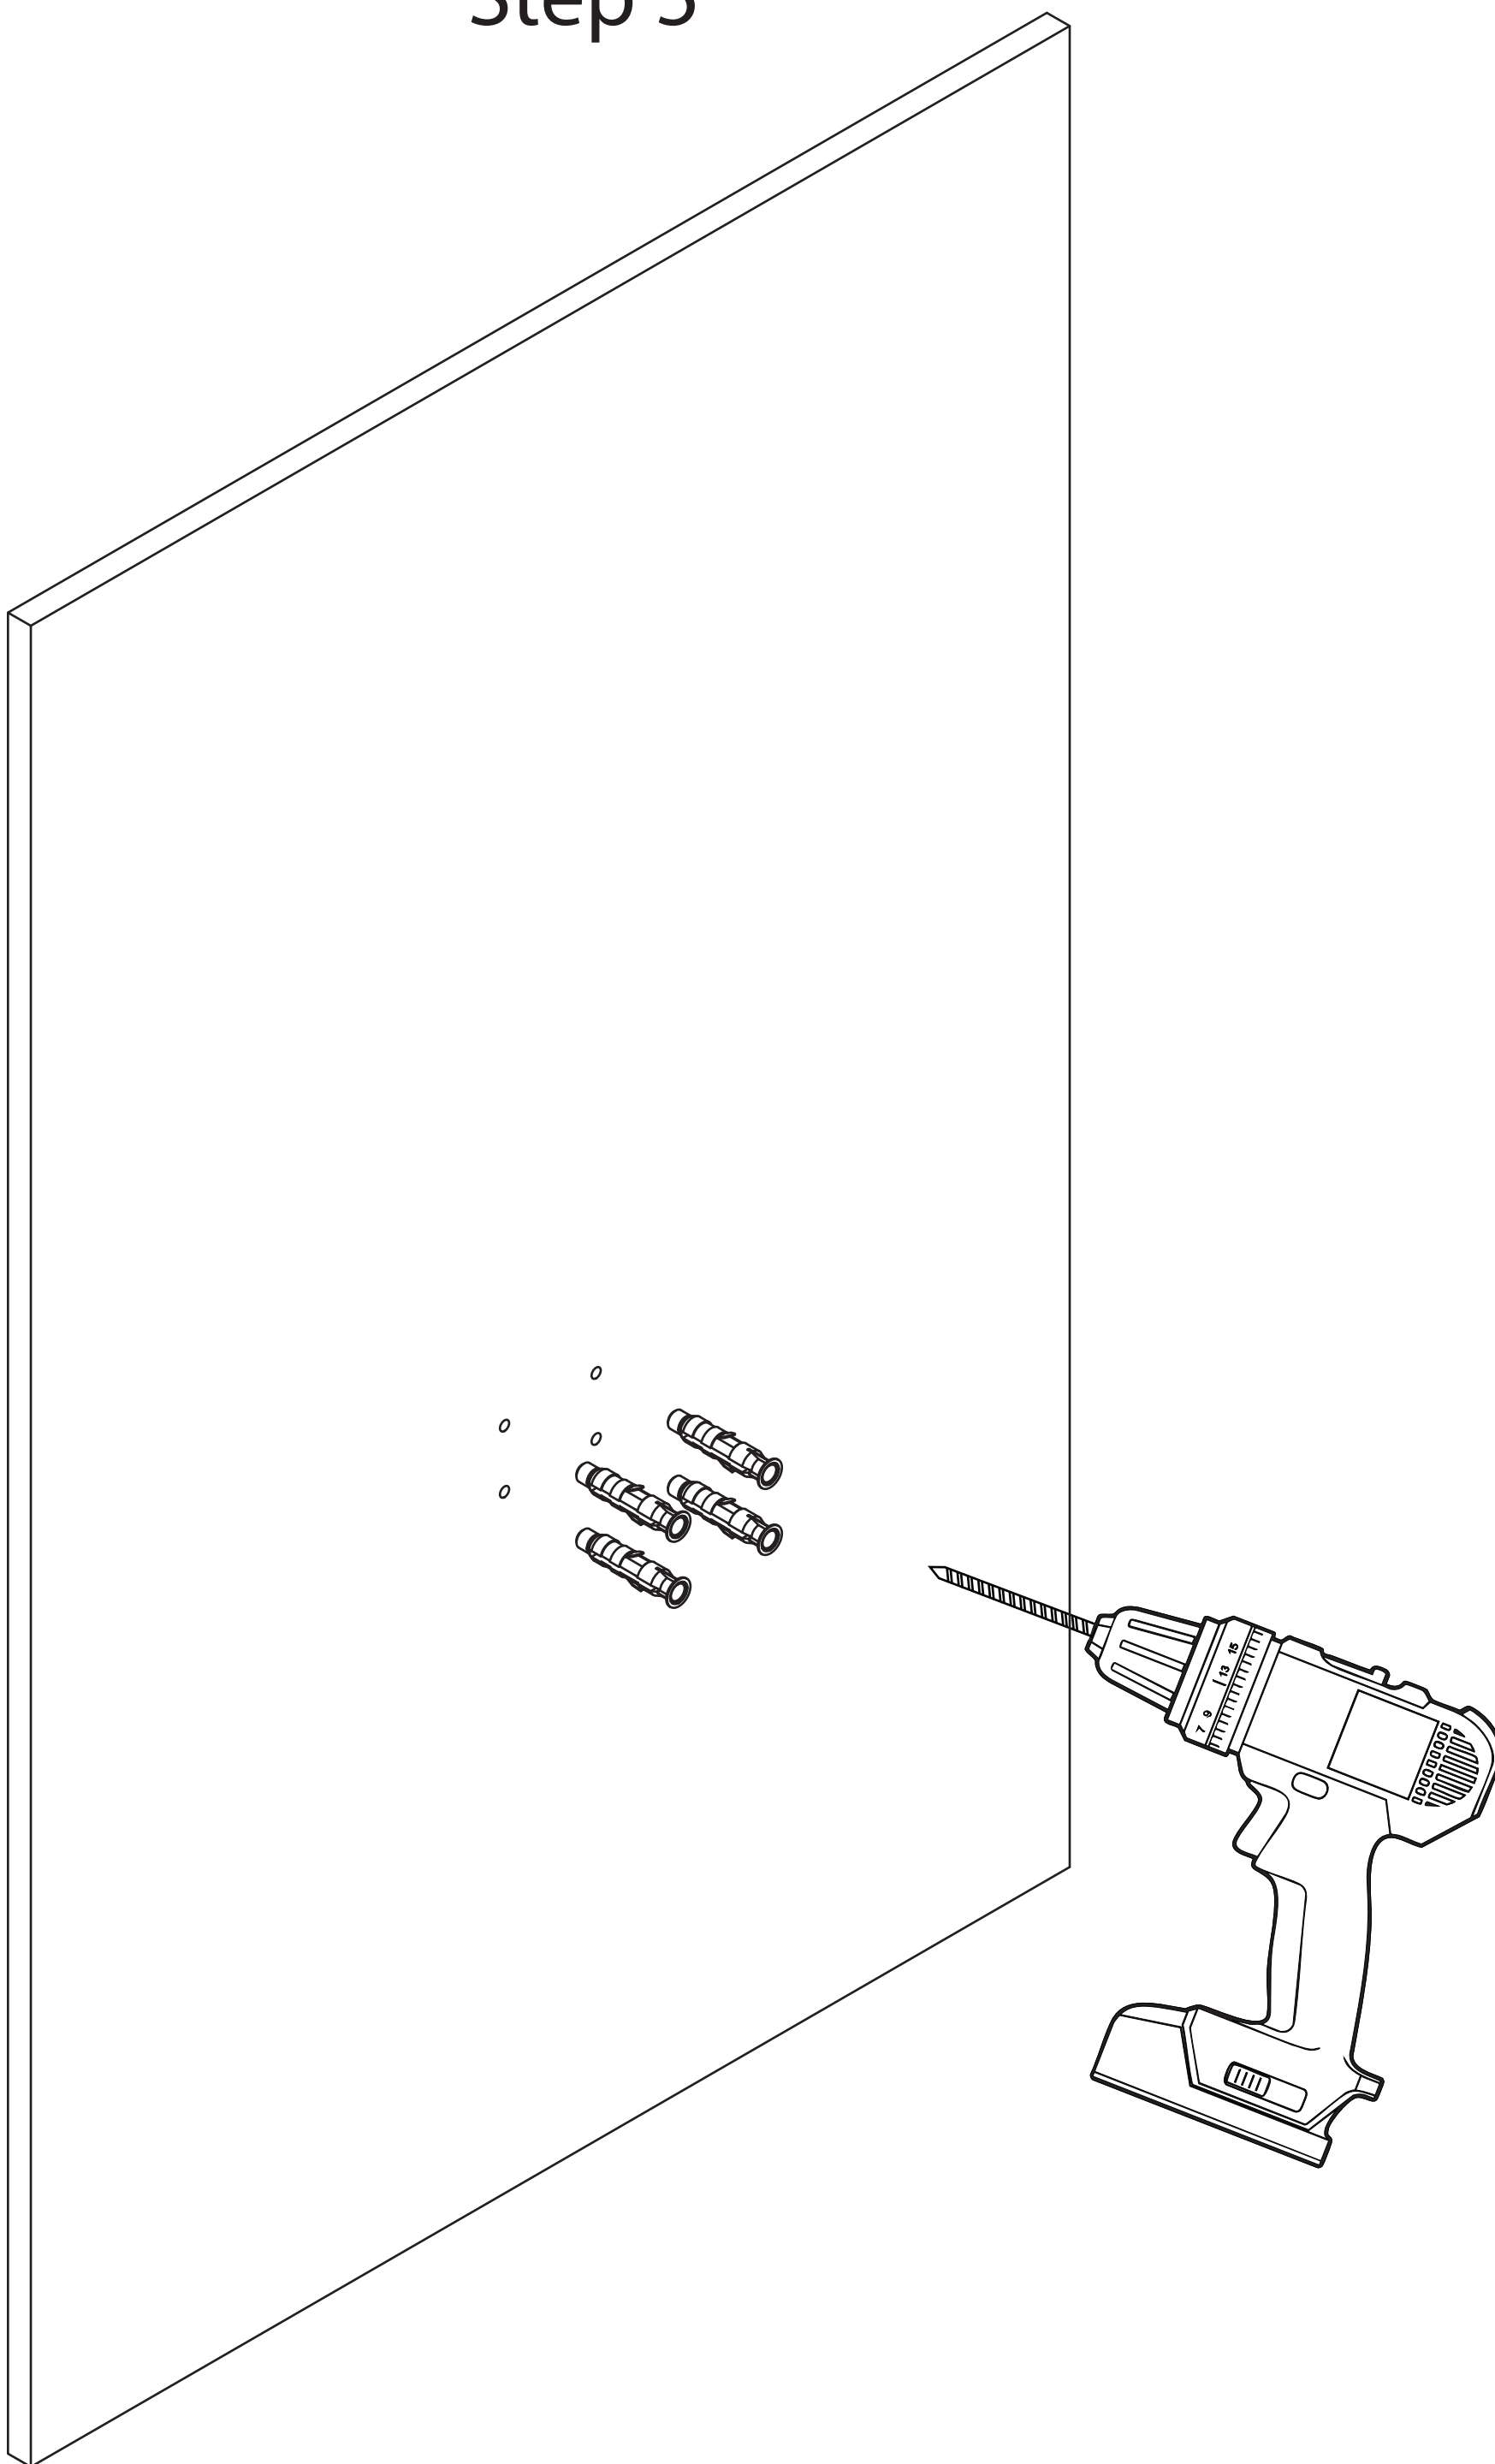


drill pilot holes for the bottom end cap appropriate for your wall anchors or screws and insert included anchors into your wall, if using them

Step 6

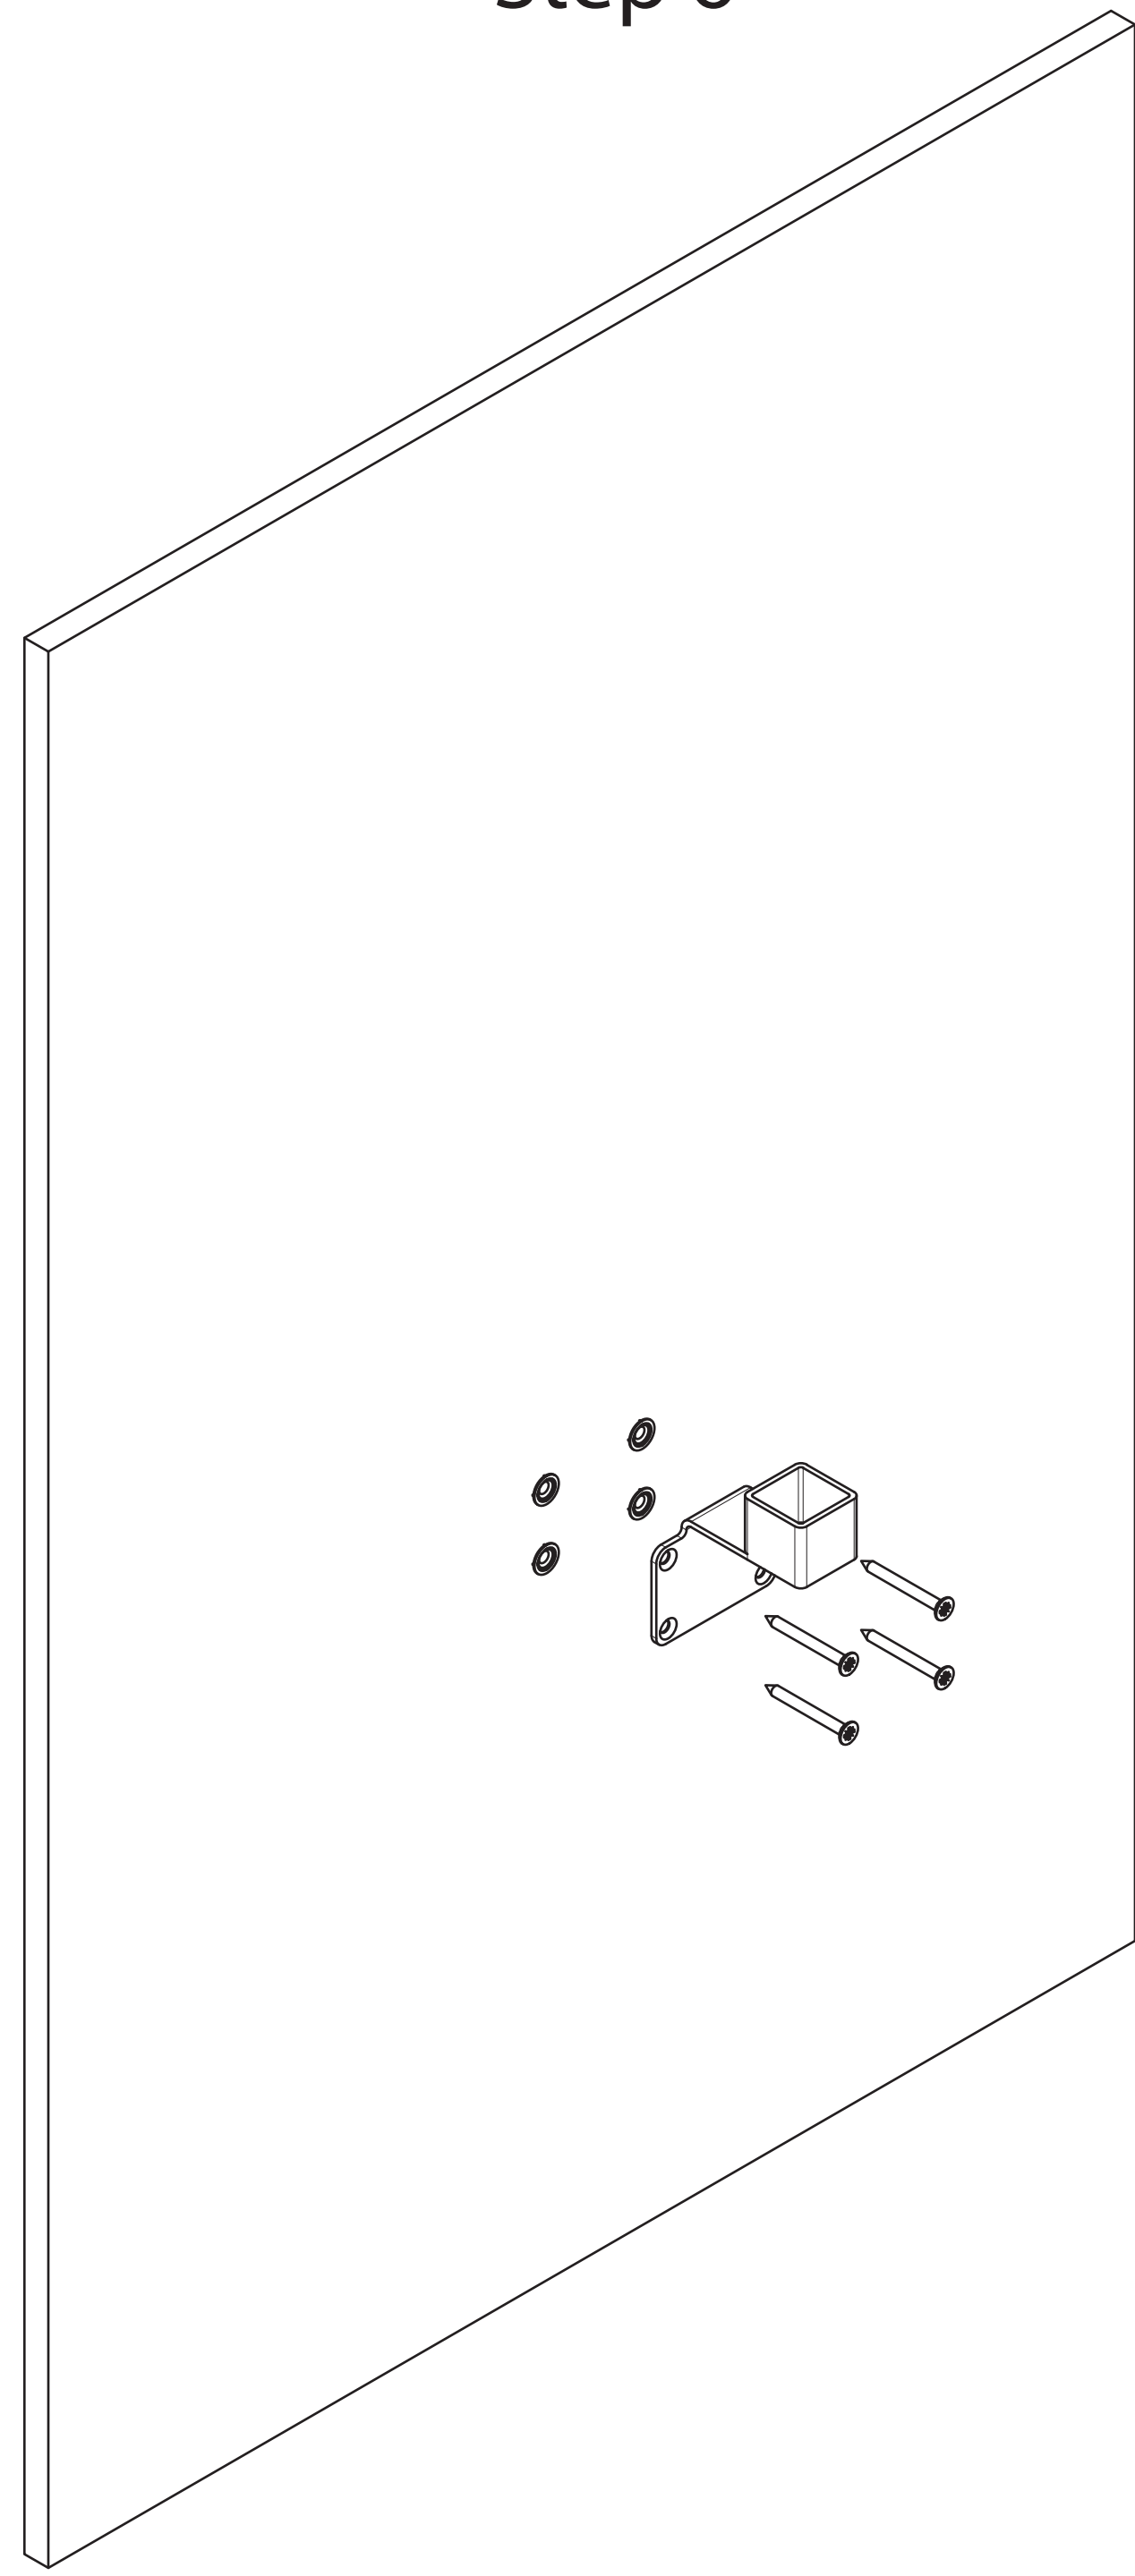


screw the bottom end cap (without Wham Bam logo) to the bottom set of holes in the wall

Step 7

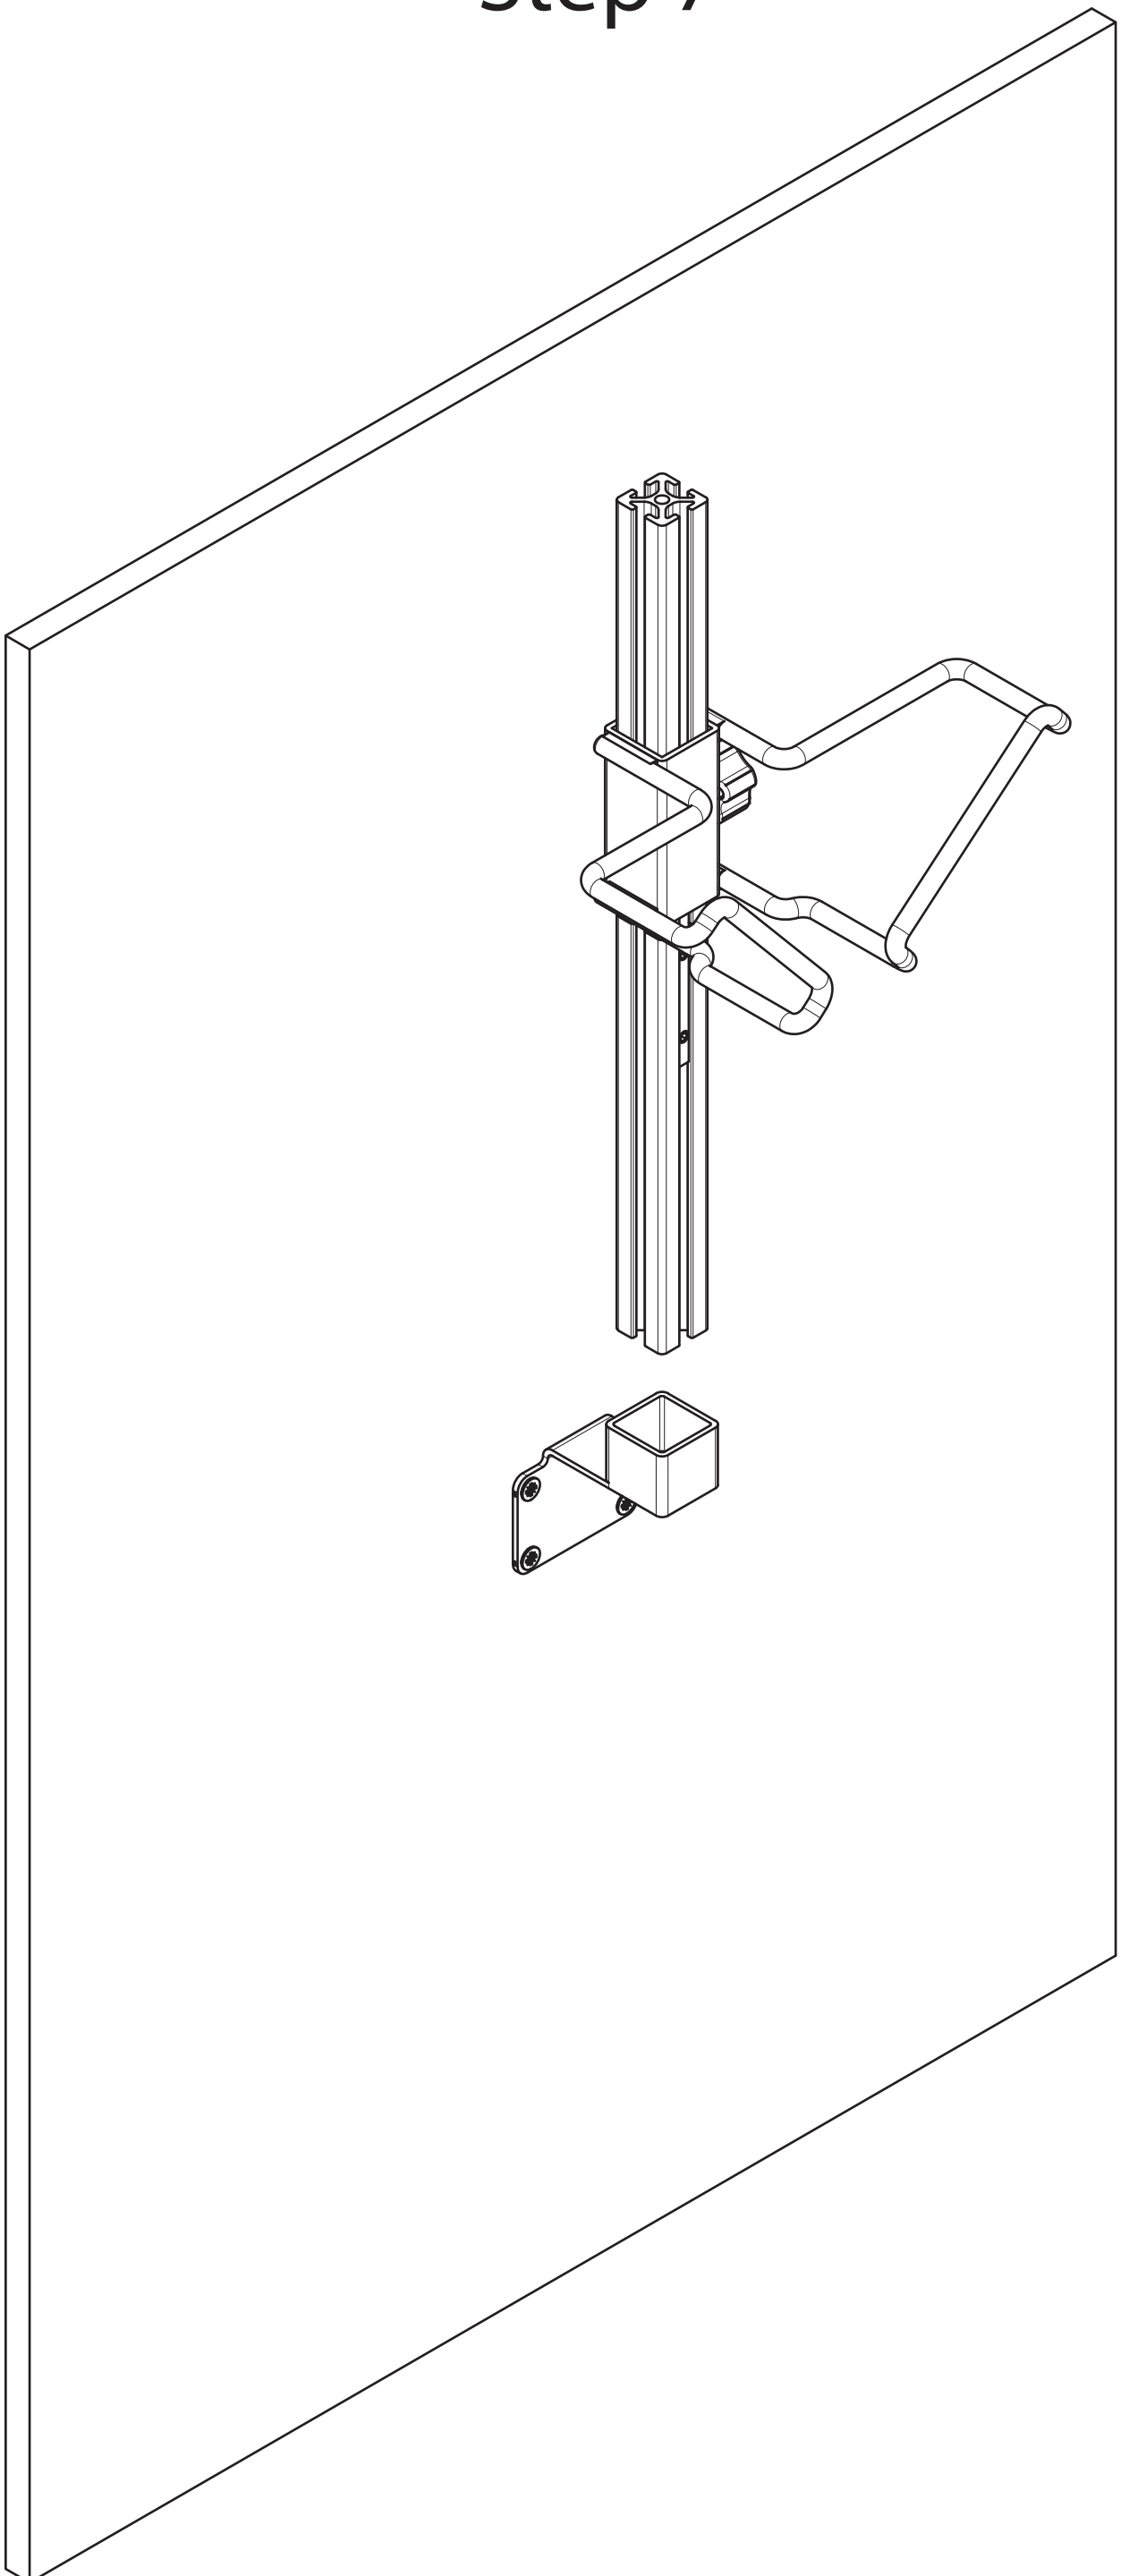


insert the ULTIM8 DRIP assembly into the bottom end cap

Step 8

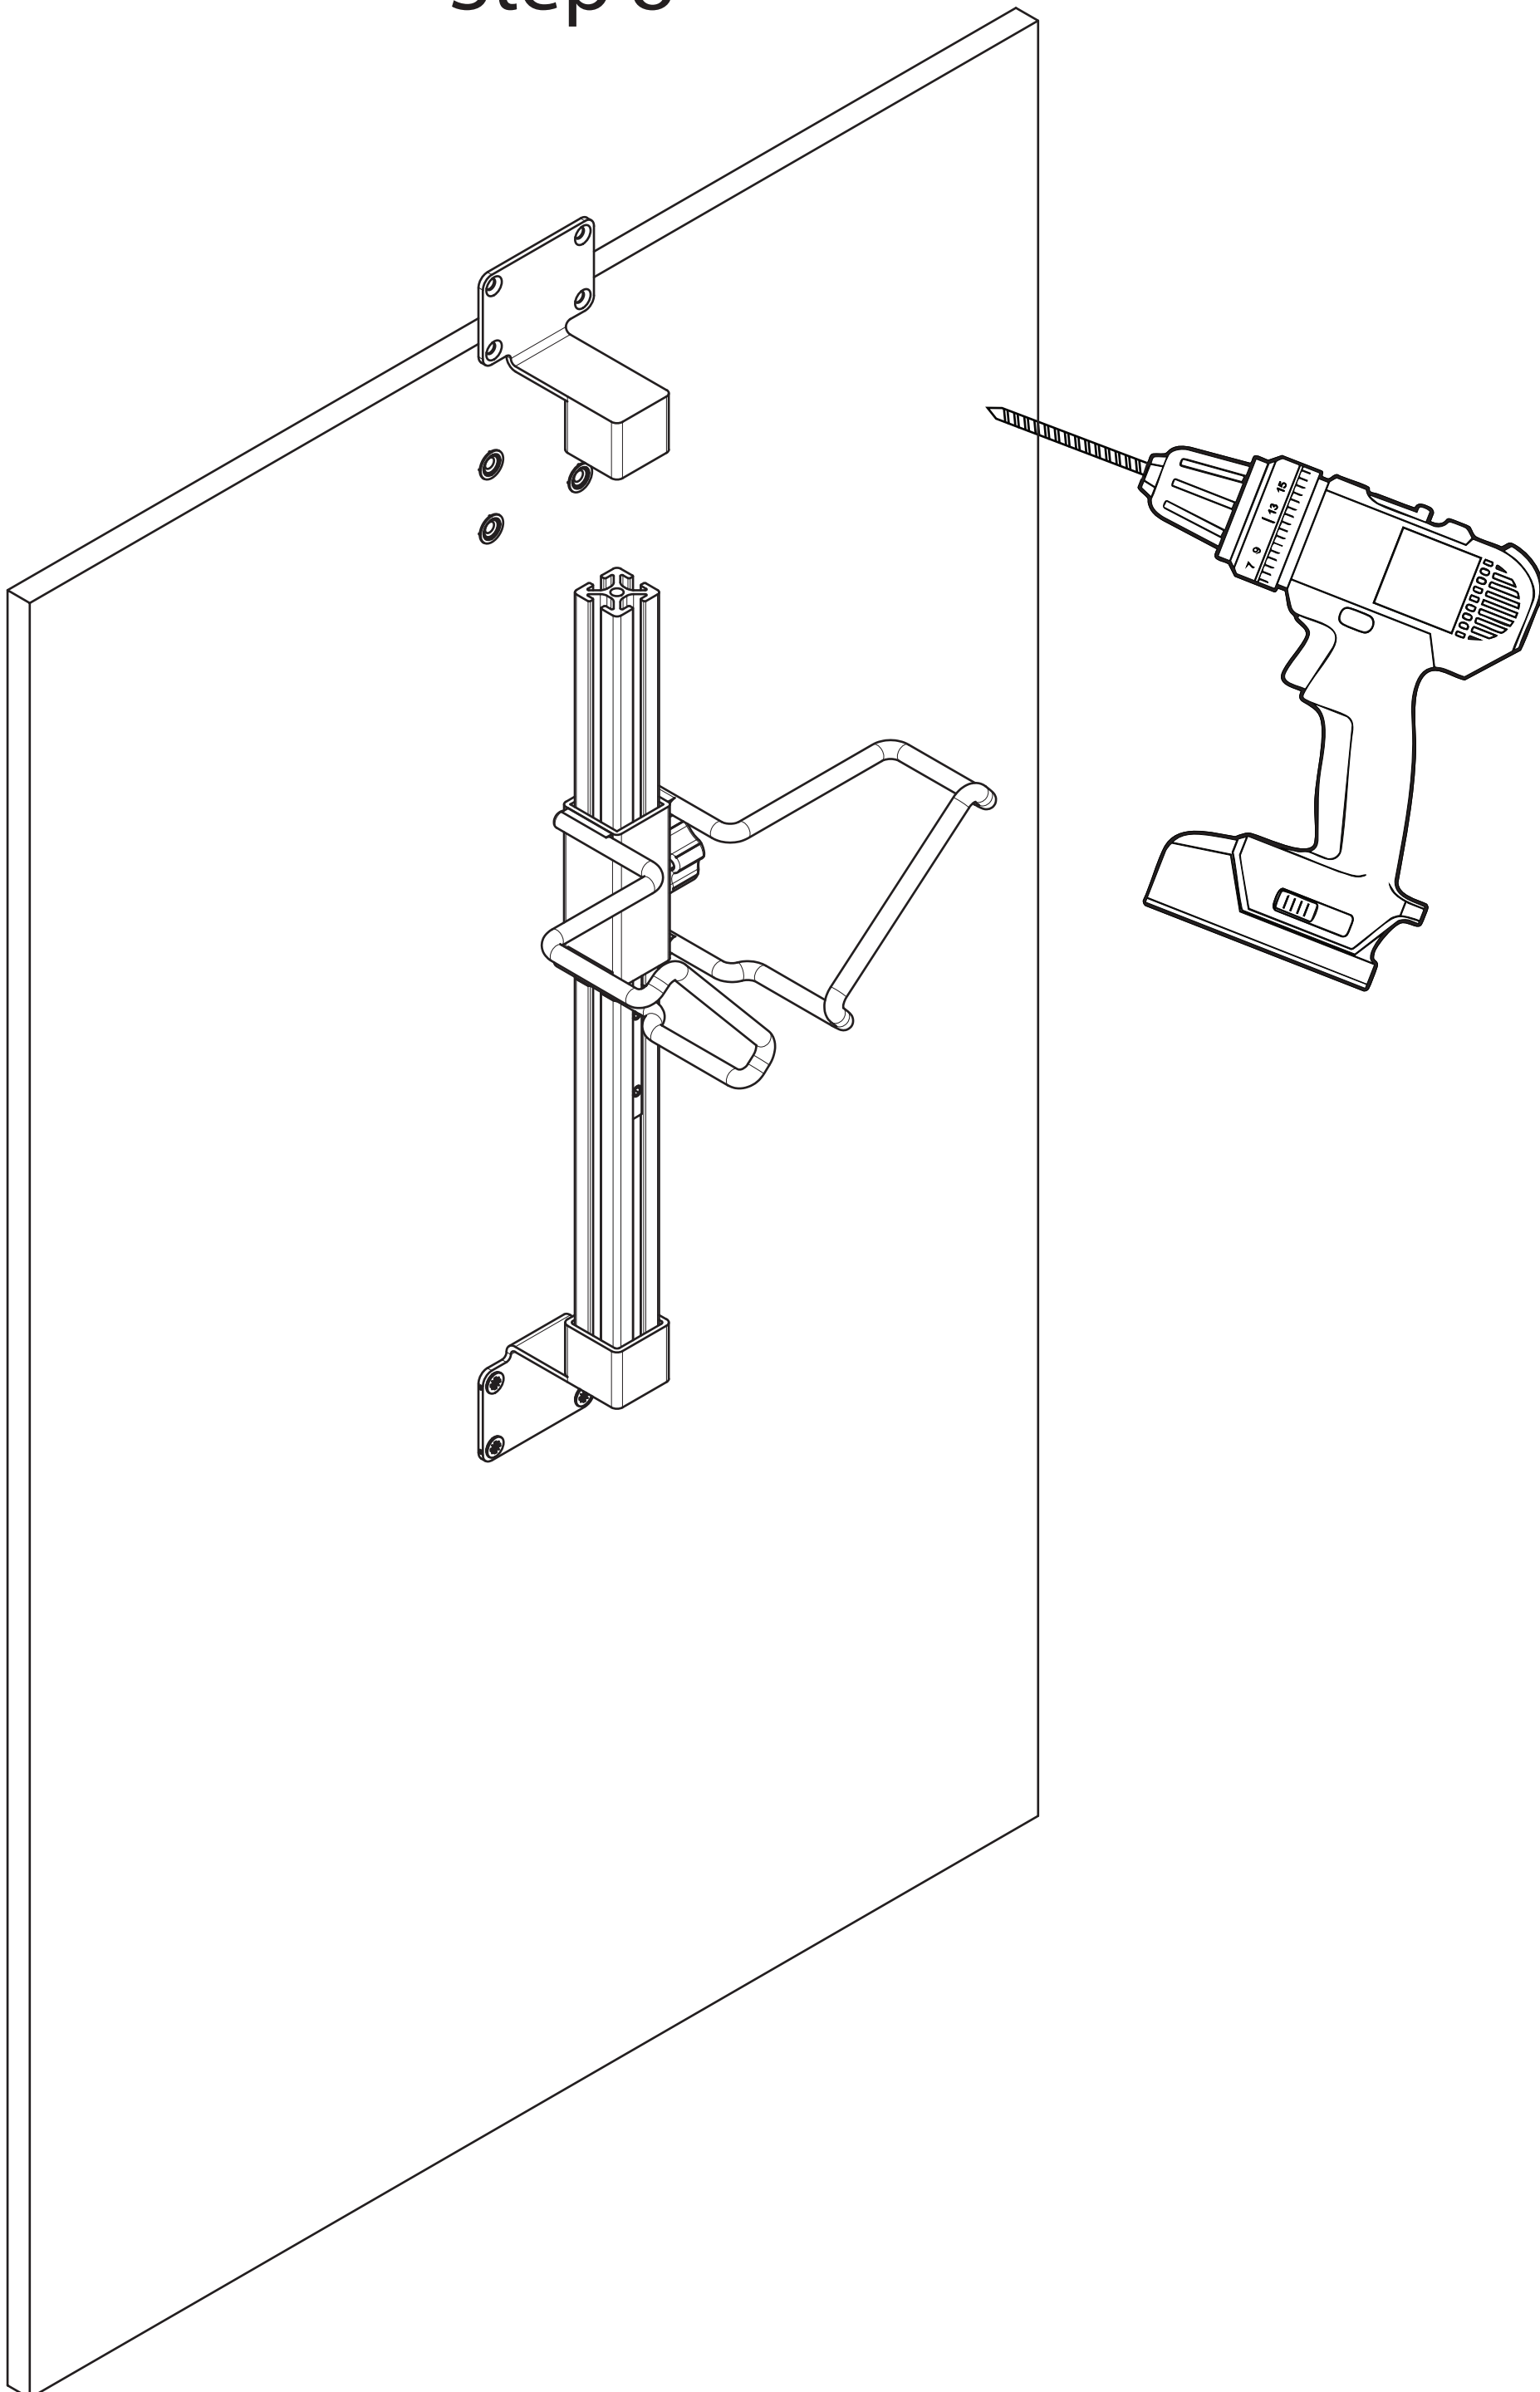


position the top end cap (with Wham Bam logo) onto the assembly and check your hole centers, adjust if necessary. Drill holes and insert wall anchors

Step 9

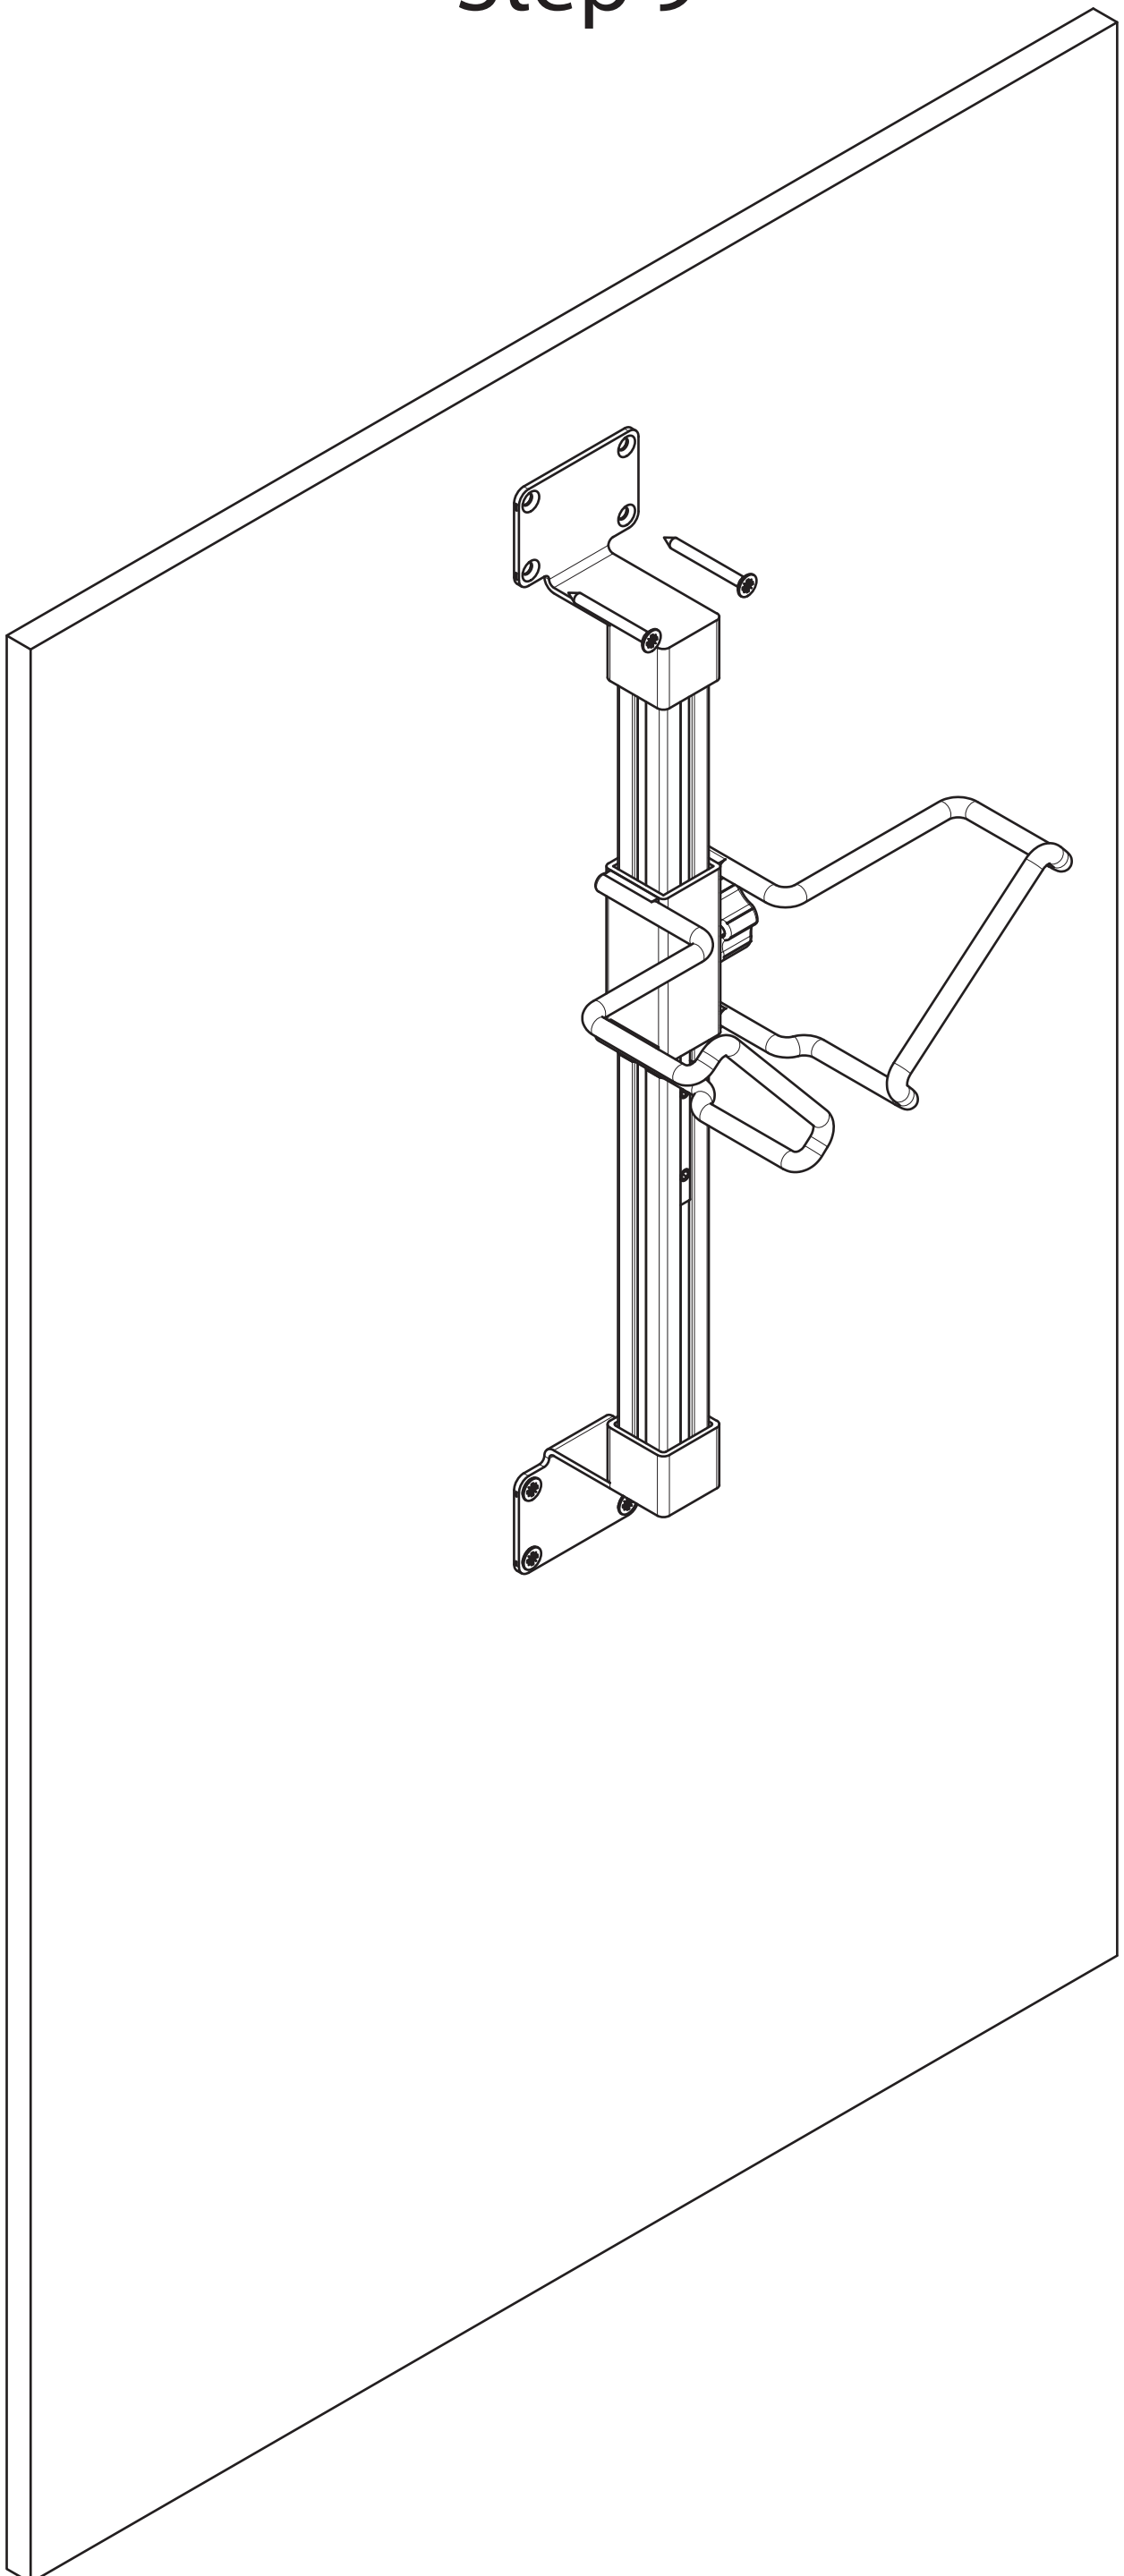

screw the top end cap to the wall to finish the assembly

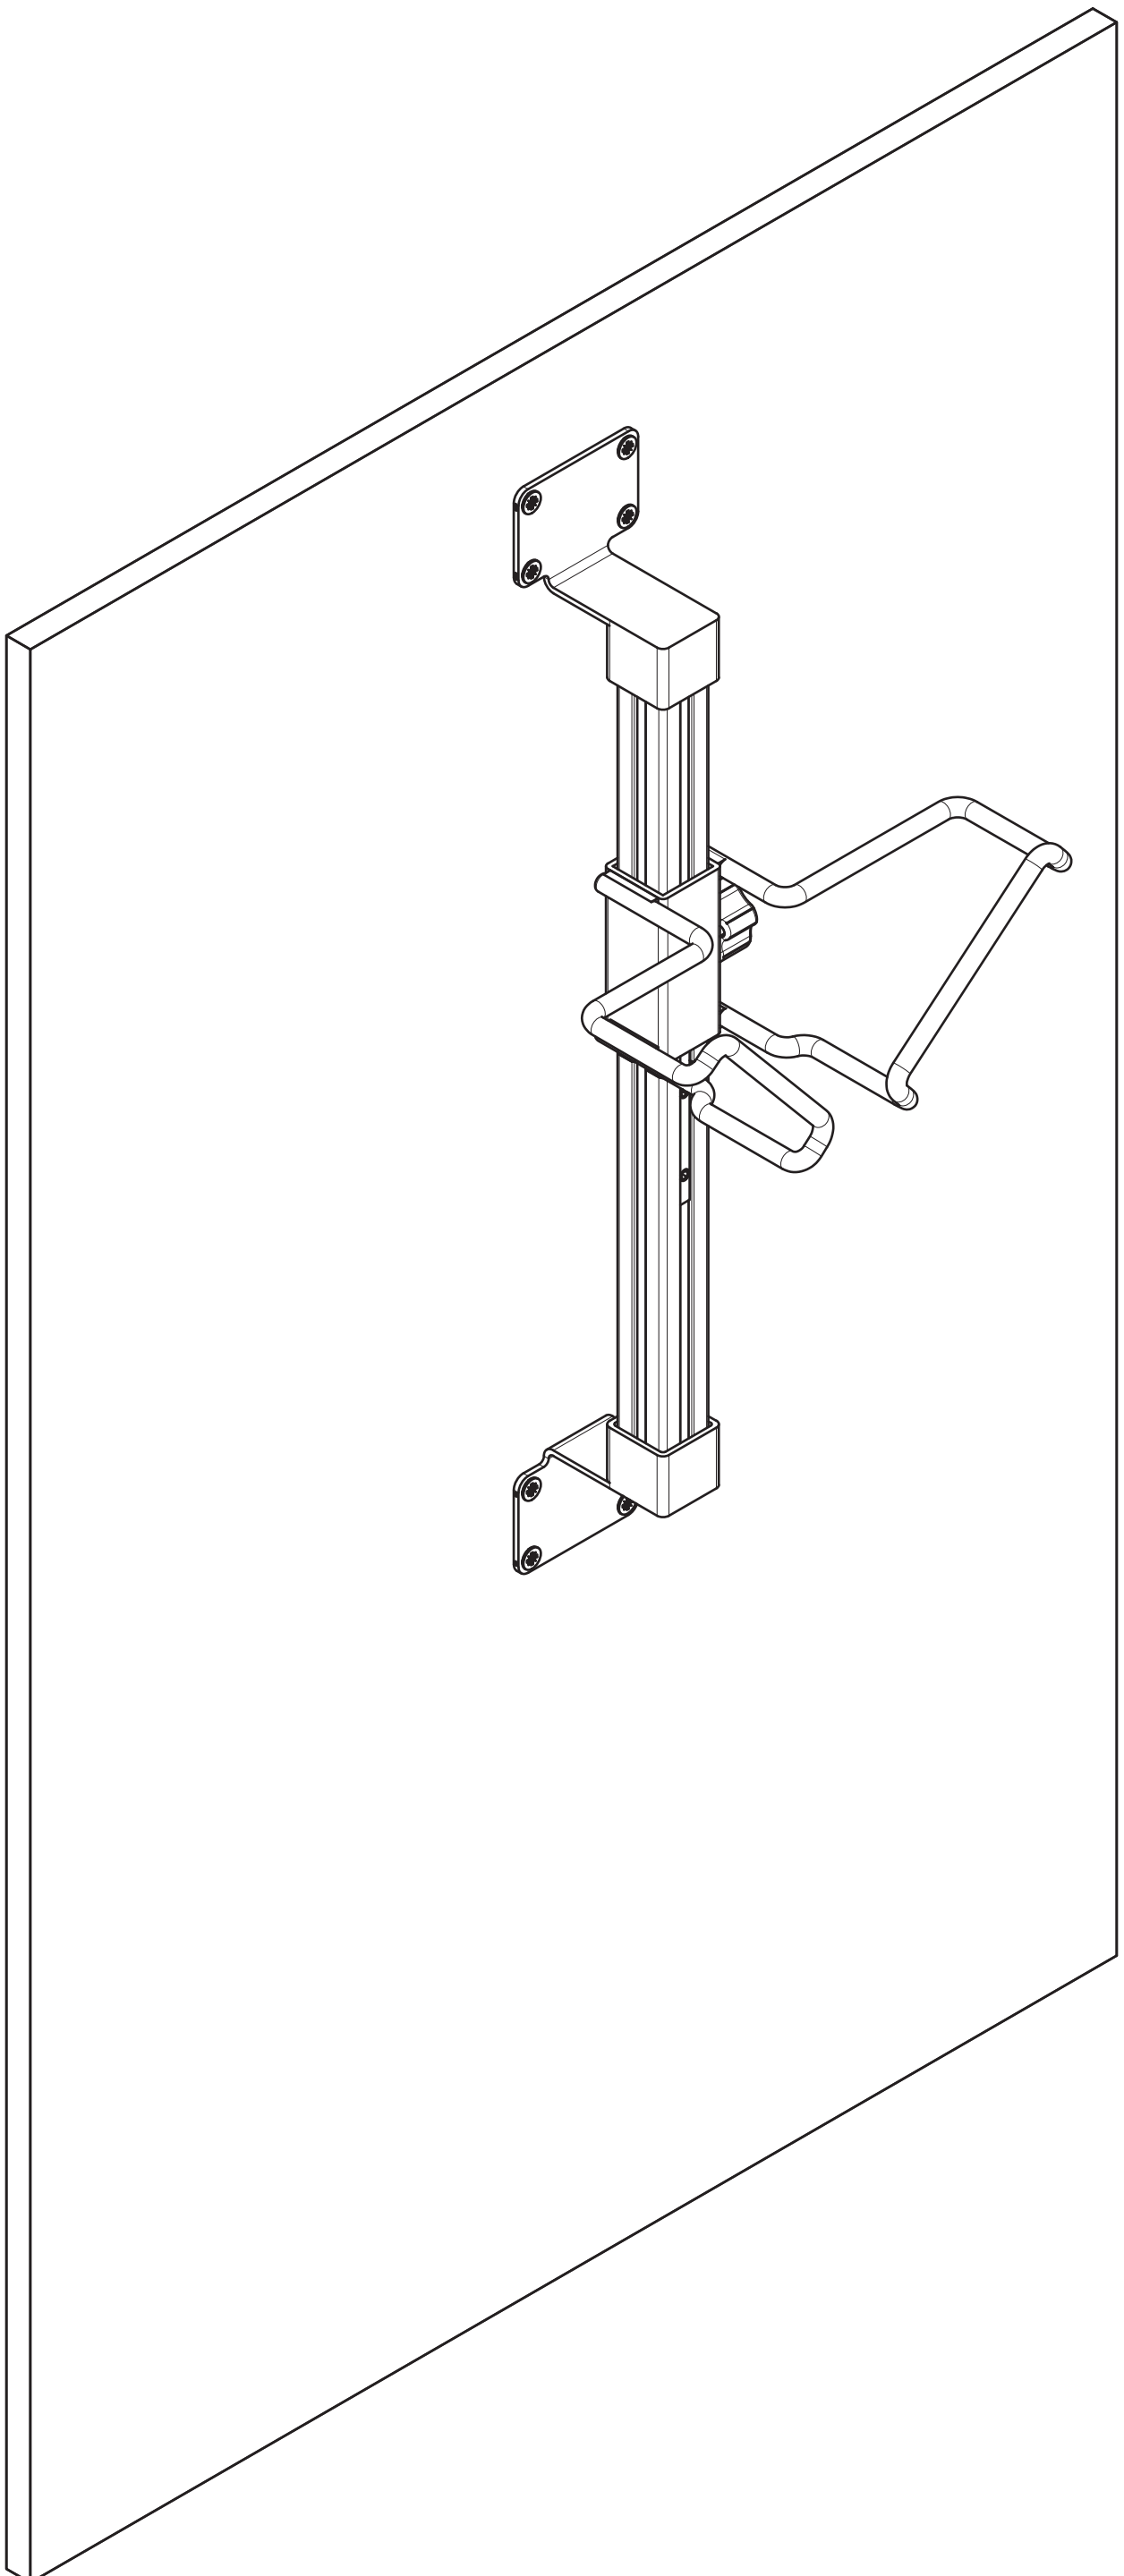

Final Assembled ULTIM8 DRIP wall version