




- 1** The deadbolt comes set to 2-3/4" (70mm). Adjust length to 2-3/8" (60mm) if necessary. (wear gloves to protect from possible pinching).

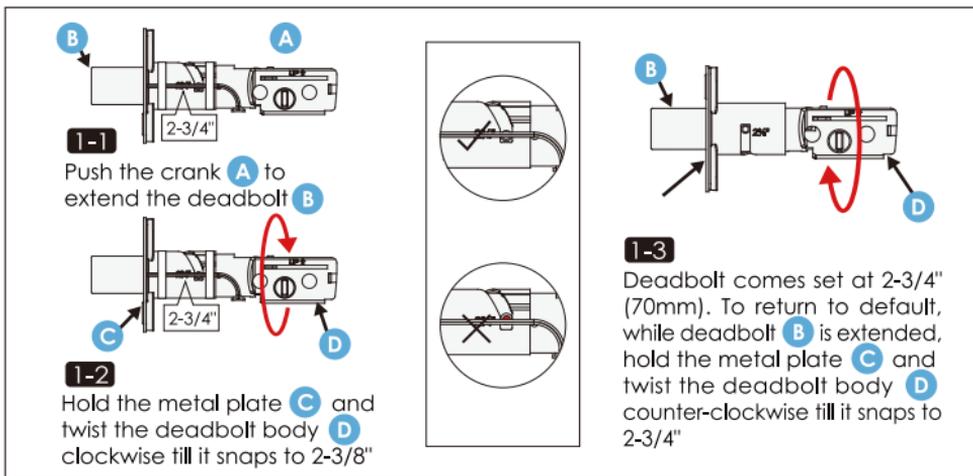

- 2** When installing the deadbolt and door strike, make sure the red marks are aligned.


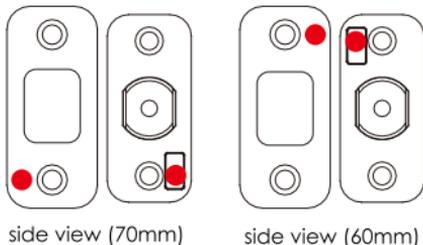


- 3** Observe the correct position of the cable.

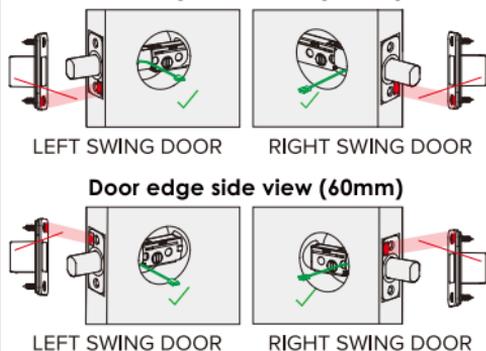

During installation, **DO NOT** hammer the deadbolt and door strike with tools to avoid damaging the sensors.

- 4**

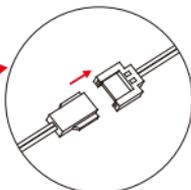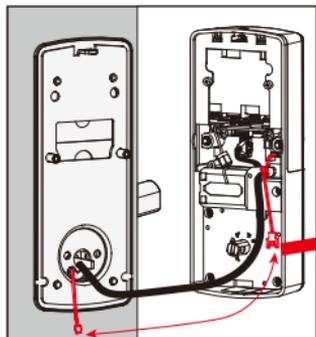

Do not plug in yet, not until you finish the installation.