

Smart Deadbolt Retrofit Kit



Scan to watch a guided installation video

You Will Need:



Phillips
Screwdriver



Flathead
Screwdriver




Scissors



Vise

Parts Description

T

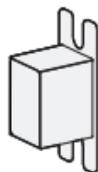

Dust Box

S




Strike Spacer

L




Strike Plate

C

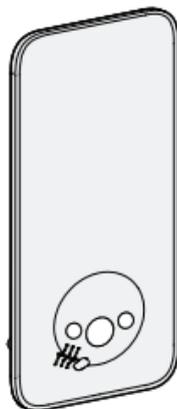

Mounting Plate

A

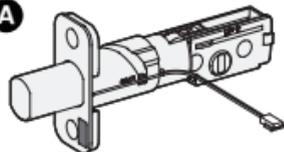

Deadbolt

A1



KA4 x 20mm Screw

A3



Cable Connector



For Support

🌐 support.Lockly.com

✉ help@Lockly.com