


2

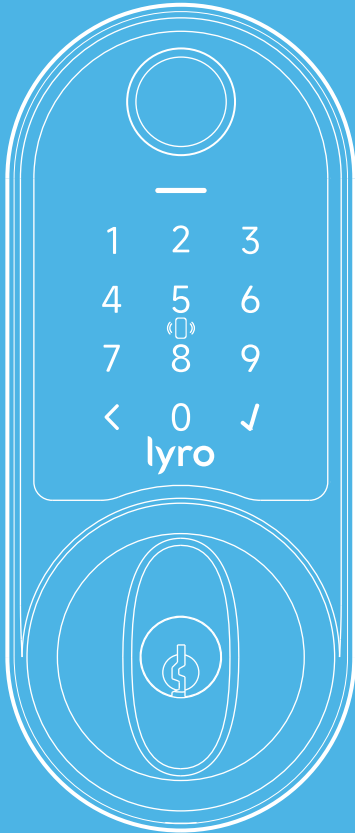

PBL758F

Lasta™ Smart Lock Deadbolt Edition

Setup and Use

lyro™
by LOCKLY



We're here to help

Your Lyro smart lock comes with lifetime technical support. Feel free to contact us with any questions or comments.

 **(669) 500-8835**


 **help@Lockly.com**

 **support.Lockly.com**

Setup


Lock Overview	03
Install Battery	04
Set Up Your Lock in the Lockly Home App	05
Digital Keypad	06
Safe Mode	07
Access Codes	08
Fingerprint Access	09/10
Fingerprint Scanning Tips & Troubleshooting	11
NFC Key Tag	12
Unlocking using App	13
Locking/Unlocking with Physical Key	13
Troubleshooting FAQs	14/15/16

Lock Overview

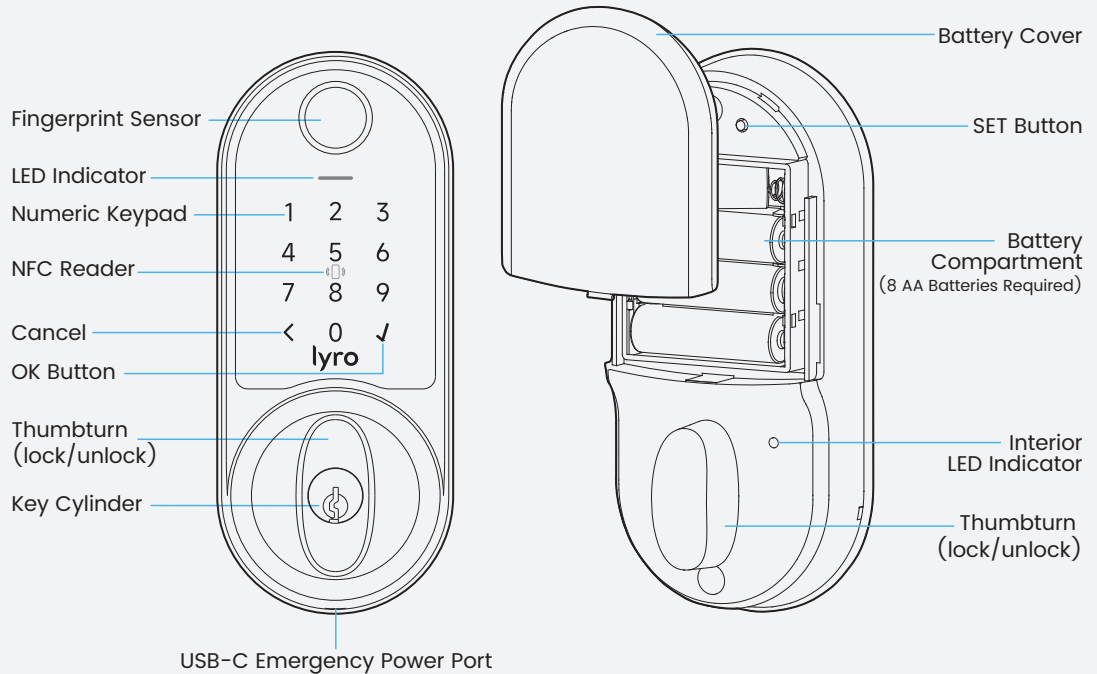

Before setup, you can unlock the door using the default PIN 123456 or any fingerprint. These temporary methods work only during setup and disable automatically once complete.

Install Battery

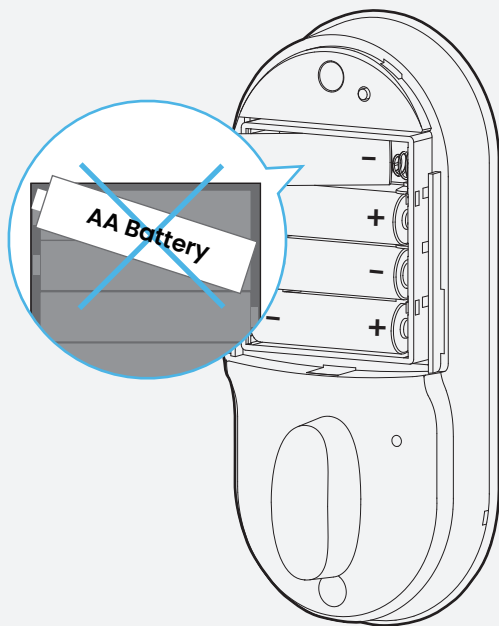

- Insert NEW alkaline batteries, matching (+) and (-) signs. Keep battery sides from touching to avoid short circuits.
- If a battery leaks, remove it immediately and clean the holder with a dry cloth.

Low Battery

When the keypad is activated, the digits 20, 10 or 0 will appear for one second, indicating the remaining battery level of 20%, 10% and near depletion respectively. The red indicator light will flash for one minute along with repeated beeping alerts. Please replace the batteries promptly.

If only the digit 0 keeps flashing on the keypad, the battery is completely drained. You may connect a USB-C cable to the USB-C port on the bottom of the lock for emergency power supply to unlock the device, or use the physical key for unlocking. **Install new alkaline batteries immediately after unlocking.**

Set Up Your Lock in the Lockly Home App


Scan the QR code or visit [Lockly.com/app](https://lockly.com/app) to download the Lockly Home app. Sign up or log in to your account. The app will walk you through the final installation, configuration and profile setup for a personalized user experience.



Set Up Your Lock in the Lockly Home App

1. Tap the + icon to add a new device.
2. Select Lyro™ Smart Lock > PBL758F.
3. When prompted, press the **SET button** to enter pairing mode. The SET button is located on the top of the battery, which can be accessed after removing the battery cover.
4. The display will show “3”, giving you 3 minutes to complete setup.
5. Follow the in-app instructions to finish setup.
6. To set up user credentials, open the Lockly Home app and follow the on-screen instructions.

SET Button

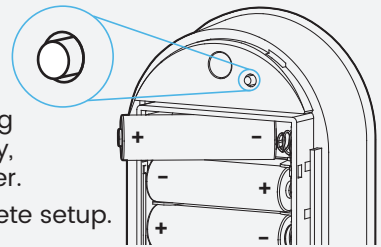

Troubleshooting

If the lock does not enter pairing mode:

1. Press and hold the **SET button** for 5 seconds to factory reset the lock.
2. The Numeric Keypad will display < and ✓. Press ✓ to confirm the reset operation.
3. Then press the SET button once to enter pairing mode.

Unable to connect to Wi-Fi

This lock only works with 2.4 GHz Wi-Fi. Please check that your Wi-Fi router has a 2.4 GHz network turned on and that the lock is close enough to receive a good Wi-Fi signal.

Digital Keypad



Unlock

Press any key to wake up the screen.

Enter your PIN code, then press the OK Button (✓) after the last digit.

Lock

To lock, either press the OK Button (✓) while the screen is on.

When the screen is off, press any number key area, or press the Cancel Button (<) twice.

Safe Mode



Countdown Prompt

(Indicated by the keypad showing 3/2/1.)


If you enter 5 wrong access codes in a row within 10 minutes, your lock will enter Safe Mode. In Safe Mode, the digital keypad will flash twice and show a 3-minute countdown.

To turn off Safe Mode, you can use one of these methods

1. Unlock with registered fingerprint
2. Unlock with Registered NFC Key Tag
3. Via the Lockly Home app
4. Physical key

You can also wait for the countdown to finish, Safe Mode will automatically exit.

Access Codes


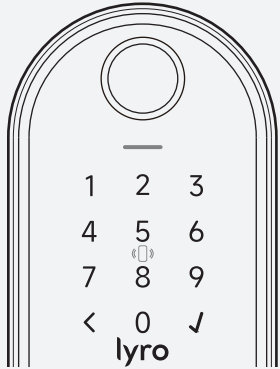


Default PIN Code

The default PIN code is **1 2 3 4 5 6**. During setup, you will be prompted to set a new code to replace it.

Adding a Code

Select your lock in the Lockly Home app, then tap **Access > User Access Codes**, and follow the on-screen instructions to set up the various code types.

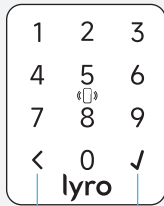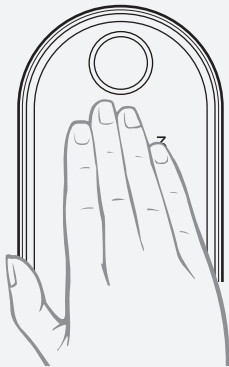

Cancel OK Button

To unlock your Smart Lock :

Press any key to wake up the keypad.

Enter your **6 to 8 digit Access Code** followed by the **OK Button**. Press **Cancel** button anytime to reset if you entered the wrong digit.

If the **Access Code** entered is correct, the door will unlock. If the **Access Code** entered is incorrect, the LED indicator will **flash red**.




Five consecutive wrong attempts will put Lyro smart lock in "Safe Mode".

Fingerprint Access

Fingerprint Scanning

For fast and reliable fingerprint recognition, it's important to follow correct finger positioning when registering your fingerprints.

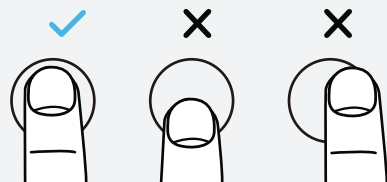

Alignment

Avoid positioning finger too high or low on the sensor. Avoid positioning finger too much off-center left or right.



Angle

Keep finger straight and somewhat flat; avoid holding at an angle.

Adding a Fingerprint

In the Lockly Home app, choose your lock, then tap "Access" and follow the on-screen instructions.




Scanning Process

For optimal accuracy, your finger will be scanned five times, with a countdown displayed on the digital screen starting from five.

Place your finger on the sensor and hold still until you hear a beep. Slightly adjust your finger position and hold for each remaining scan until you hear a longer beep indicating a successful scan.

Fingerprint Access

Featuring advanced biometric technology.

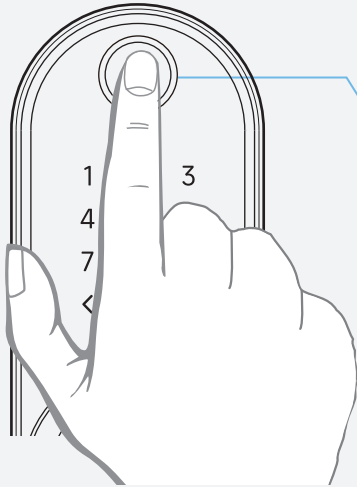

Place a registered finger flat and centered on the sensor.

Green circular LED

With a beep : Door is unlocked. Turn the Thumbturn to open the door.

Red circular LED

With two beeps : Finger not recognized. Try again or try another registered finger.



Our advanced biometric sensor recognizes your fingerprint in 0.2 seconds for fast and reliable access.

Fingerprint Scanning Tips & Troubleshooting

Tips for Fingerprint Enrollment and Recognition

- Place your finger to completely cover the sensor with maximum contact surface.
- Position the center of your finger (core) to the center of the sensor.
- Hold your finger still for more than a second until you hear a beep.
- Scan a finger that is clean and free from dirt.
- We don't recommend fingerprint access for children 12 and under, as their fingers change as they grow.
- Older adults with faded fingerprints may have trouble getting recognized.
- If your finger has a cut, scar, or cracked skin due to dryness, try another finger.
- To improve the speed and recognition of your fingerprint reader when facing issues in recognizing your fingerprint due to varying physical and weather conditions like moisture, sweat, cold, or dryness, we recommend adding an additional scan of your finger while in such conditions. This extra scanning process will help enhance the performance of the fingerprint reader and increase its ability to accurately recognize and unlock.

Troubleshooting Fingerprints

In case of poor fingerprint conditions:


- If wet – wipe excess moisture from finger before scanning
- If dirty – wipe stains and dirt off from finger before scanning
- Make sure the sensor is clean from dirt or smudges – wipe sensor with soft cloth regularly

For more troubleshooting help, visit [Lockly.com/support](https://lockly.com/support).

NFC Key Tag


Adding an NFC Key Tag

You can add and manage NFC Key Tag through the Lockly Home App. After you receive the instruction to add the card, the lock will beep and return to the unlocking keypad with a green light once the addition is successful.

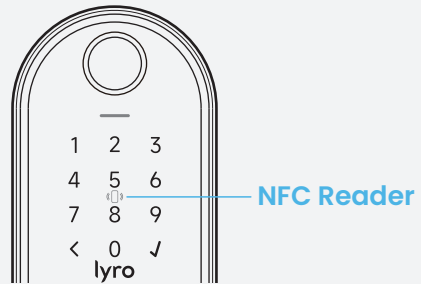

Unlocking

- Hold your **NFC Key Tag** close to the display.
- When you hear a beep, rotate the knob to unlock. Turn the **Thumbturn** to open the door.

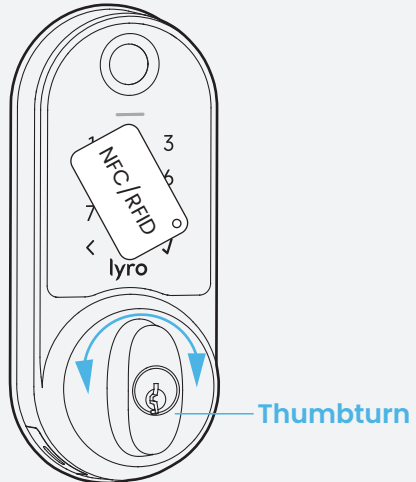

Unlocking using App


Unlock

Find and select your lock in the Lockly Home app, then tap Unlock. After that, manually turn the thumbturn to finish unlocking.

Lock

To lock the door, simply twist the thumbturn; the deadbolt will extend to secure the lock.

Locking/Unlocking with Physical Key

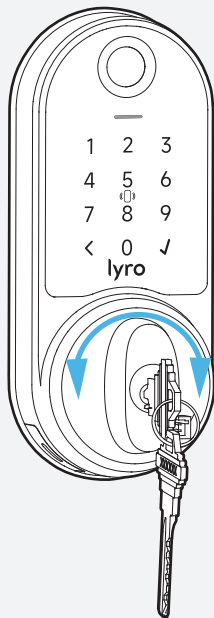

To lock or unlock your door with the included **physical key**, insert the key into the keyhole.

Right-hand swing doors (RH) turn clockwise to unlock, or counterclockwise to lock.

Left-hand swing doors (LH) turn clockwise to lock, or counterclockwise to unlock.

Troubleshooting FAQs

Troubleshooting/FAQs

Why is my keypad not responding?

- Your smart lock is in **Safe Mode**. Unlock with other access credentials (fingerprint, mobile app, physical key, or NFC Key Tag) to exit.
- Check if batteries are installed correctly.
- Refer to support.Lockly.com for more information about **Safe Mode**.

Why is my keypad on full blackout?

- Battery may have been completely depleted. Use the physical key or a Type-C cable to connect your lock to a mobile power source to temporarily activate it.

Why is my fingerprint not recognized?

- Check that you are using a registered finger.
- Make sure your finger is clean and dry.
- Position your finger at the center of the sensor.

Troubleshooting/FAQs

How to pair my smart lock with a new phone?

- Download the Lockly Home app on your new device and log in using the same account credentials, follow in-app instructions.

How to pair my smart lock with a new Lockly account?

- You will need to perform a factory reset with the following steps.
 1. Access your existing Lockly Home app account and select Settings > Reset and Pairing > Perform Factory Reset.
 2. As an alternative method, press and hold the SET button for 5 seconds to initiate a factory reset on the lock.

Lockly Technical Support

(669) 500-8835

help@Lockly.com

support.lockly.com

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. It should be installed and operated with a minimum distance of 20cm between the radiator & your body.

IC WARNING

This equipment contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement

This equipment meets the exemption from the routine evaluation limits in section 4.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Cet équipement est conforme à l'exemption des limites d'évaluation habituelle de la section 4.5 de la norme RSS-102. Il doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et toute partie de votre corps.



WARNING: Cancer risk from exposure to Lead. See www.P65Warnings.ca.gov.

Let's co-create together!

Have an innovative idea?
Need a new solution for a situation?

Let us know. We are always innovating based
on customer input and feedback.
(669) 500-8835 or help@lockly.com

lyro[™]
by **LOCKLY**

Lasta[™]
Smart Lock Deadbolt Edition